

# WX370 Tractor Mount Splitter Parts Manual Prior to S/N 2370196



#### **Foreword**

EMB Mfg. has prepared this parts manual to assist customers in ordering quality OEM replacement parts.

Proper and regular service and replacing old, worn or broken parts with the correct Wallenstein parts are essential to prolonging the life of your Wallenstein product. Please refer to this manual before ordering any replacement parts.


All information contained in this parts manual is based on the latest product specification available at the time of printing this manual. If your product differs from the specifications contained within this manual contact EMB Mfg. for information.

EMB reserves the right to alter specifications on their products at any time.

Reproduction of this parts manual of any kind is prohibited without prior written permission from EMB Mfg.

## **Table of Contents**


Cylinder	4
Main Parts	5
Valve and Fittings	6
Valve	7
4-Way Wedge (Optional)	9
Decal Breakdown	10

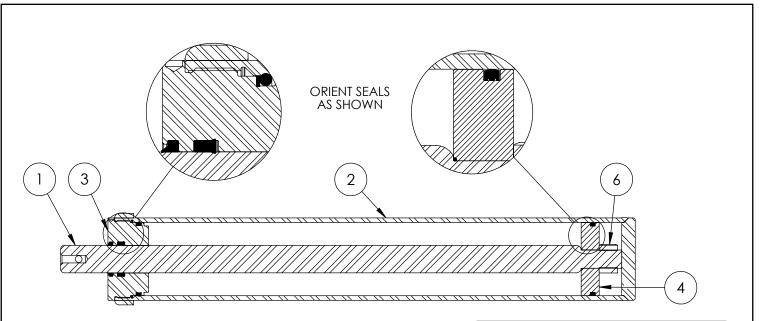


#### 4" x 24" STROKE CYLINDER PARTS

ITEM	PART NO.	Description	QTY.
1	2011C1012	Rod, 1-1/2 x 1	1
2	2011C1014	Barrel, 4"	1
2	*2054C1015*	*Barrel, 4" with Handle Base*	*
3	G400-150SA	4" Bore x 1-1/2" Rod Gland	1
4	P100-400SA	4" Bore Piston	1
5	SLK-4015	Seal Kit, 4 x 1-1/2	1
6	Z72292G8	Hex Lock Nut 1NF Grade 8	1


<sup>\*</sup>REQUIRED FOR HORIZONTAL / VERTICAL MODELS WITH HANDLE\*

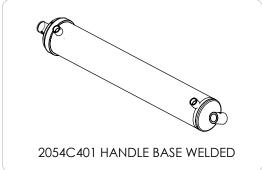

Page 4 Nov 2010

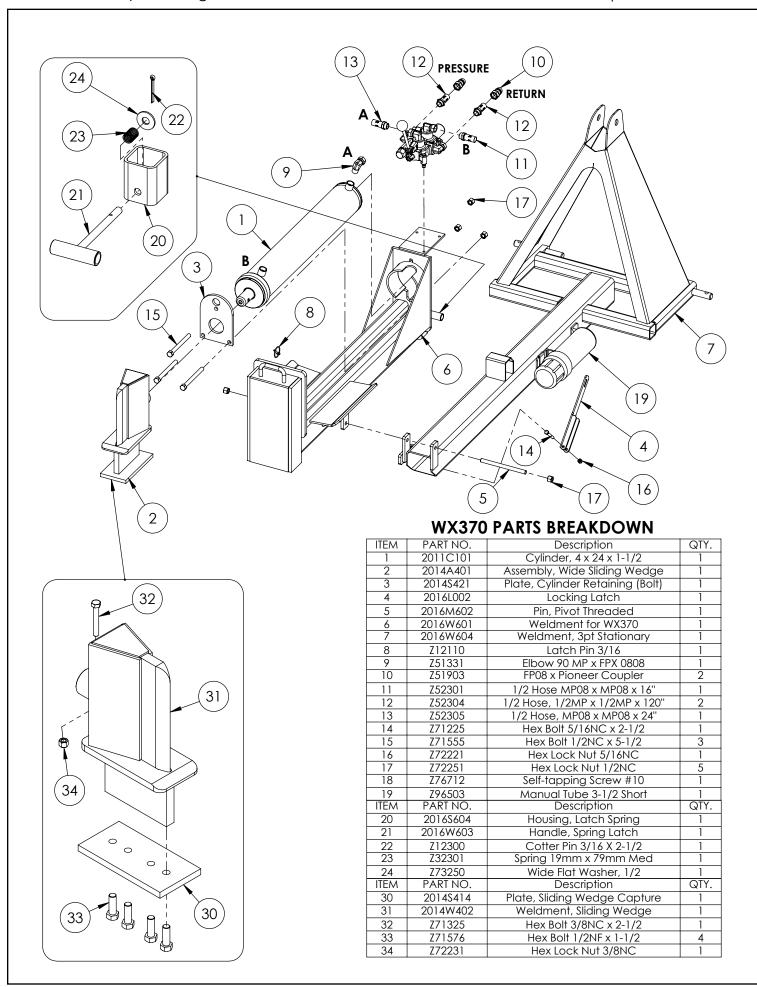


Nov 2010 Page 5

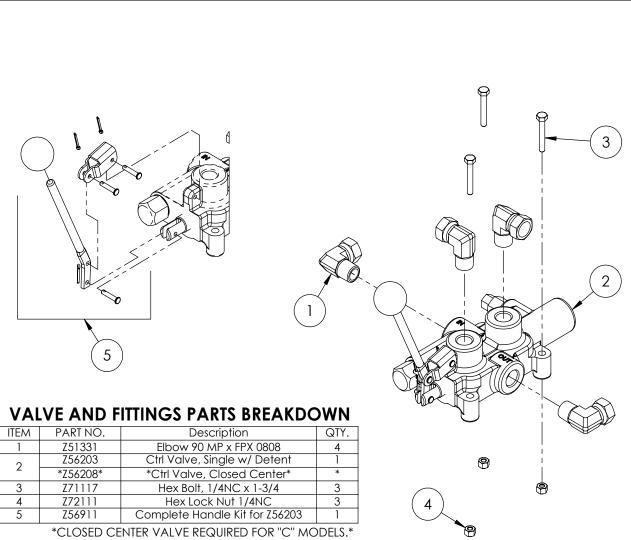


Nov 2010 Page 6

#### **Z56203 Valve Breakdown**

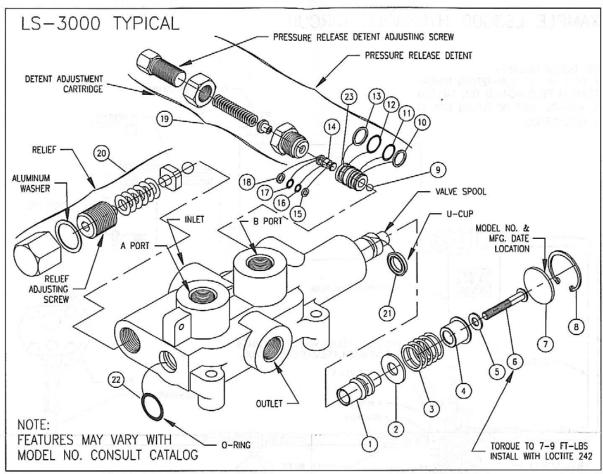

PLEASE NOTE: BEFORE REMOVING VALVE SPOOL OR SPOOL SLEEVE REMOVE DETENT	LS-3000 KITS AND CARTRIDGES			
ADJUSTING CART., DETENT PISTON AND STEEL BALL. INSTALL SPOOL AND SPOOL SLEEVE BEFORE REINSTALLING STEEL BALL.	ITEM	QTY	PART NO.	DESCRIPTION
PRESSURE RELEASE DETENT  This feature provides a pressure release detent for the spool 'out' (handle in) position. When the spool is manually placed in the detent position oil is directed to the 'B' work port (the port away from the handle). When the pressure in the 'B' port reaches a preset level the detent will release and the spool will center. The factory setting is 1400 psi. The detent release pressure is adjustable by loosening the jam nut and turning the adjusting screw. Turning the adjusting screw clockwise will increase the detent release pressure and counterclockwise will decrease the detent release pressure. NOTE: if the detent release pressure is too low the detent will not hold. If cap screw item 6 becomes loose detent will not function properly.  RELIEF VALVE  An adjustable ball spring relief valve is standard on all LS-3000 valves. The standard factory setting is 2250 psi @ 3 gpm and 120°F.  Other settings can be specified.  The relief pressure is adjusted by removing acorn nut, and turning the adjusting screw. Turning the adjusting screw clockwise will increase the pressure and counterclockwise will decrease the pressure (a pressure gauge must be installed in the inlet line whenever the relief pressure is adjusted). Do not backout adjusting screw to the point it falls out.  WARNING: OVERPRESSURE MAY CAUSE SUDDEN AND UNEXPECTED FAILURE OF A COMPONENT IN THE HYDRAULIC SYSTEM RESULTING IN SERIOUS PERSONAL INJURY. ALWAYS USE A GAUGE WHEN ADJUSTING A RELIEF VALVE.	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	670700019 670500033 670300020 67140010 670500026 220000953 670500032 230001125 230009009 240019013 240000014 24001901 24001901 240016068 24001908 660130002 660130001 660125004 660130001	DETENT SLEEVE WASHER SPRING STOP CUP WASHER CAP SCREW SPACER SNAP RING STEL BALL BACK-UP WASHER O-RING O-RING BACK-UP WASHER PISTON BACK-UP WASHER O-RING BACK-UP WASHER O-RING BACK-UP WASHER DETENT ADJUSTING CART. RELIEF KIT U-CUP O-RING PISTON SLEEVE LS-3000 SEAL KIT RELIEF KIT DETENT ADJUSTING CART. PRESSURE RELEASE DETENT KIT COMPLETE HANDLE KIT



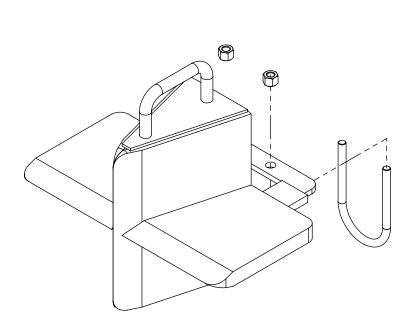


W4120 4-Way Wedge (Optional)


ITEM	PART NO.	DESCRIPTION	QTY
1	2082W201	Weldment, Main W4120	1
2	2082\$201	Safety U-bolt	1
3	Z72231	Hex Lock Nut 3/8NC	2


Nov 2010 Page 9

#### **WX370 DECAL BREAKDOWN**

ITEM	PART NO.	DESCRIPTION	QTY
1	Z94039	CAUTION - Read Manual	1
2	Z94040	WARNING - Moving Wedge	2
3	Z94067	Clear Guide	2
4	Z94056	Wallenstein	2
5	Z94019	Made in Canada	4
6	Z94066	Apply Oil or Grease	1

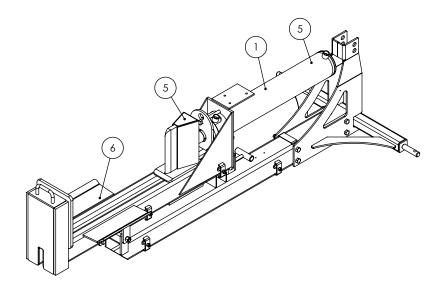

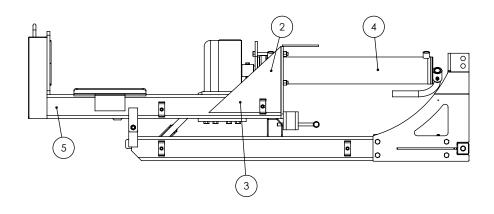

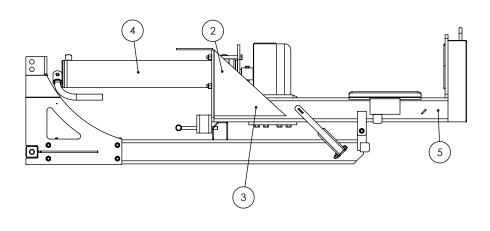

Page 10 Nov 2010

#### **3PH Splitter Decals**

Z94056



Z94067



Gardez le guide de glissement propre de tout débris de bois. Z94019



Z94066

# NOTE APPLY OIL OR GREASE UNTIL PAINT IS REMOVED

 
Z94040



Z94039

# **CAUTION**

- Read and understand Operator's Manual before using.
- Move controls in neutral, stop engine, set park



- Install boom lock pin before servicing, repairing or maintaining.
- Do not allow anyone within 20 ft of machine during operation. Keep children away.
- Wear appropriate safety gear including but not limited to face shield, heavy gloves and steel toed shoes with slip resistant soles.
- · Operate only on level ground.
- Do not operate on hillsides or when the working area is cluttered, wet, muddy or icy to prevent slipping or tripping.
- Do not place hands or feet between log and wedge/stripper or base.
   Keep all hydraulic components in good
- working order.

  Stop engine when leaving splitter
- unattended.
- Review safety instructions annually.

Z9403



## **WALLENSTEIN Products Manufactured by:**

#### EMB MFG Inc.

4144 Boomer Line St. Clements, Ontario Canada N0B 2M0 Phone: 1-877-695-9283

Fax: 519-699-4146 www.embmfg.com