


WX360 Tractor Mount Splitter Parts Manual Prior to S/N 23605

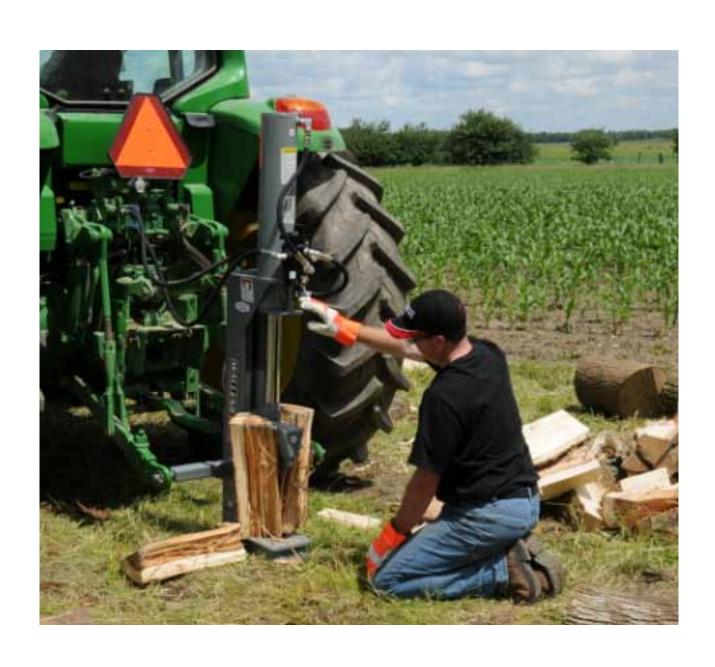

Foreword

EMB Mfg. has prepared this parts manual to assist customers in ordering quality OEM replacement parts.

Proper and regular service and replacing old, worn or broken parts with the correct Wallenstein parts are essential to prolonging the life of your Wallenstein product. Please refer to this manual before ordering any replacement parts.


All information contained in this parts manual is based on the latest product specification available at the time of printing this manual. If your product differs from the specifications contained within this manual contact EMB Mfg. for information.

EMB reserves the right to alter specifications on their products at any time.

Reproduction of this parts manual of any kind is prohibited without prior written permission from EMB Mfg.

Table of Contents


| Cylinder | 4 |
|------------------------|----|
| Main Parts | 5 |
| Valve and Fittings | 6 |
| Valve | 7 |
| 4-Way Wedge (Optional) | 9 |
| Decal Breakdown | 10 |

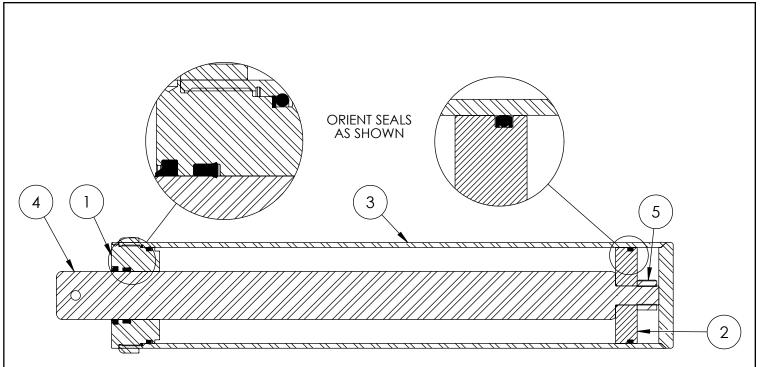


5" x 24" STROKE CYLINDER PARTS

| ITEM | PART NO. | Description | QTY. |
|------|------------|--|------|
| 1 | G500-250SA | 5" Bore x 2-1/2" Rod Gland With Seals | 1 |
| 2 | P100-500SA | 5" Bore Piston With Seals | 1 |
| 3 | 2015C5014 | Barrel, 5" | 1 |
| 4 | 2015C5012 | Rod,2-1/2x 1 | 1 |
| 5 | Z72292G8 | Hex Lock Nut 1NF Grade 8 | 1 |
| 6 | SLK-5025 | Seal Kit, 5 x 2-1/2 | 1 |

Page 4 Nov 2010

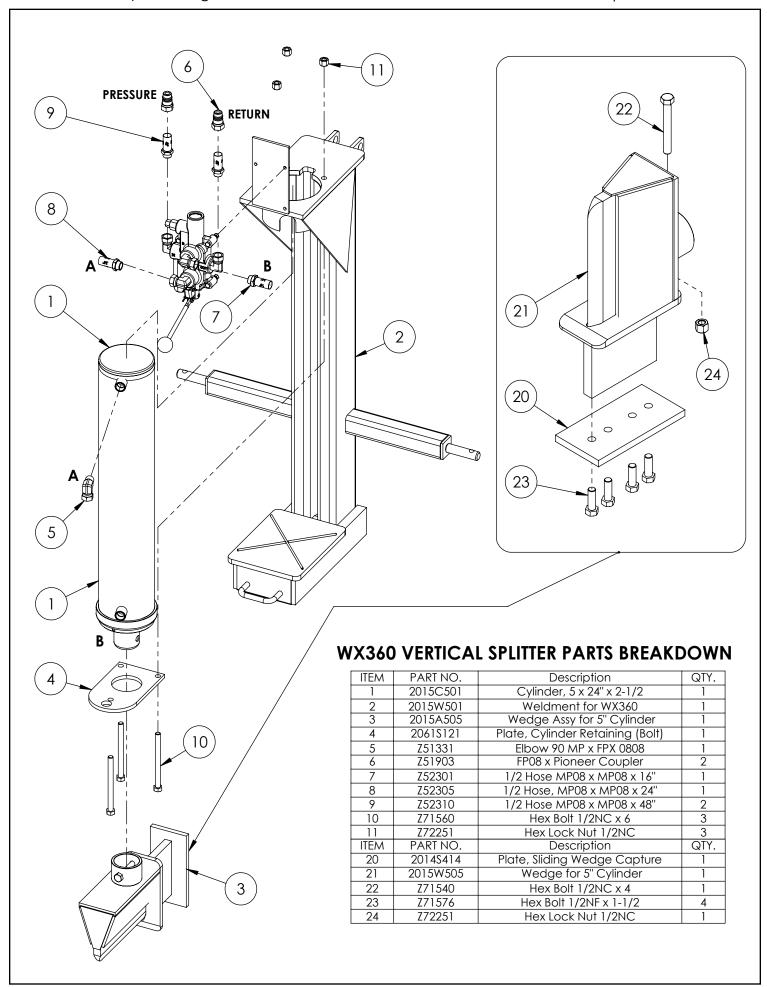


Nov 2010 Page 5

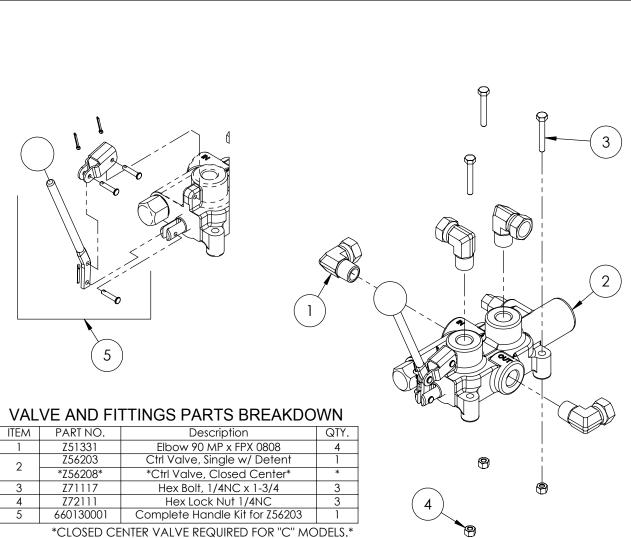


Nov 2010 Page 6

Z56203 Valve Breakdown

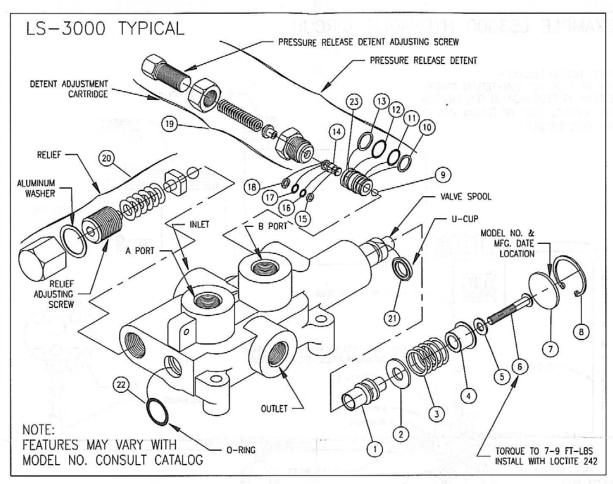

| PLEASE NOTE: BEFORE REMOVING VALVE SPOOL OR SPOOL SLEEVE REMOVE DETENT | LS-3000 KITS AND CARTRIDGES | | | |
|---|---|--|---|---|
| ADJUSTING CART., DETENT PISTON AND STEEL BALL. INSTALL SPOOL AND SPOOL SLEEVE BEFORE REINSTALLING STEEL BALL. | | QTY | PART NO. | DESCRIPTION |
| PRESSURE RELEASE DETENT This feature provides a pressure release detent for the spool 'out' (handle in) position. When the spool is manually placed in the detent position oil is directed to the 'B' work port (the port away from the handle). When the pressure in the 'B' port reaches a preset level the detent will release and the spool will center. The factory setting is 1400 psi. The detent release pressure is adjustable by loosening the jam nut and turning the adjusting screw. Turning the adjusting screw clockwise will increase the detent release pressure and counterclock- wise will decrease the detent release pressure. NOTE: if the detent release pressure is set too high the spool will not center, if the pressure is too low the detent will not hold. If cap screw item 6 becomes loose detent will not function properly. | 1 2 3 4 5 6 7 8 9 10 11 12 13 | | | DETENT SLEEVE WASHER SPRING STOP CUP WASHER CAP SCREW SPACER SNAP RING STEEL BALL BACK-UP WASHER O-RING O-RING BACK-UP WASHER PISTON BACK-UP WASHER |
| RELIEF VALVE An adjustable ball spring relief volve is standard on all LS-3000 valves. The standard factory setting is 2250 psi @ 3 gpm and 120°F. Other settings can be specified. The relief pressure is adjusted by removing acorn nut, and turning the adjusting screw. Turning the adjusting screw clockwise will increase the pressure and counterclockwise will decrease the pressure (a pressure gauge must be installed in the inlet line whenever the relief pressure is adjusted). Do not backout adjusting screw to the point it falls out. WARNING: OVERPRESSURE MAY CAUSE SUDDEN AND UNEXPECTED FAILURE OF A COMPONENT IN THE HYDRAULIC SYSTEM RESULTING IN SERIOUS PERSONAL INJURY. ALWAYS USE A GAUGE WHEN ADJUSTING A RELIEF VALVE. | 15 16 17 18 19 20 21 22 23 | 166 1 177 1 188 1 199 1 200 1 221 1 | 660530001 660125004 660330002 660130007 660130001 | O-RING O-RING BACK-UP WASHER DETENT ADJUSTING CART. RELIEF KIT U-CUP O-RING PISTON SLEEVE LS-3000 SEAL KIT RELIEF KIT DETENT ADJUSTING CART. |



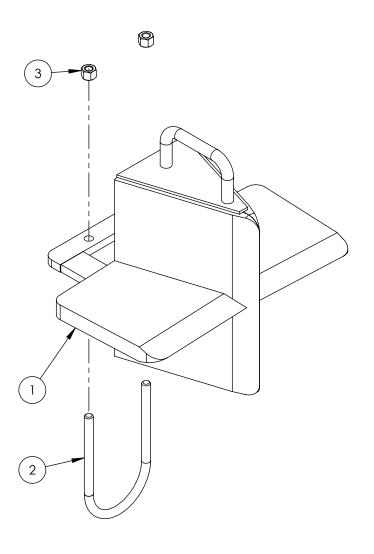


W4130 4-Way Wedge (Optional)


| ITFM | PART NO. | DESCRIPTION | OTY |
|----------|----------|----------------------|-----|
| 11 1 1 | 2082W301 | Weldment, Main 4-Way | 1 |
| <u> </u> | | | ! |
| 2 | 2082S307 | U-Bolt, 3 x 4 | 1 |
| 3 | Z72231 | Hex Lock Nut 3/8NC | 2 |


Nov 2010 Page 9

WX360 DECAL BREAKDOWN

| ITEM | PART NO. | DESCRIPTION | QTY |
|------|----------|------------------------|-----|
| 1 | Z94039 | CAUTION - Read Manual | 1 |
| 2 | Z94040 | WARNING - Moving Wedge | 2 |
| 3 | Z94067 | Clear Guide | 2 |
| 4 | Z94056 | Wallenstein | 2 |
| 5 | Z94019 | Made in Canada | 4 |
| 6 | Z94066 | Apply Oil or Grease | 1 |

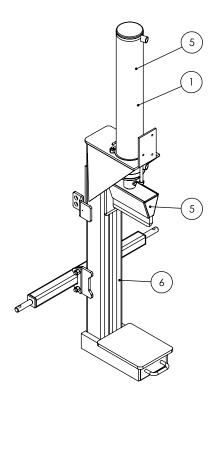

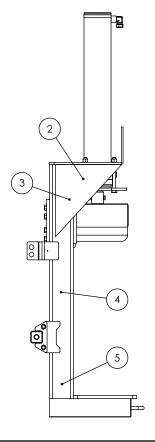

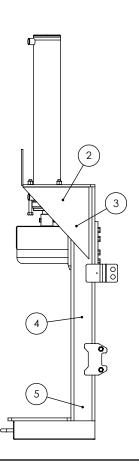

Page 10

3PH Splitter Decals

Z94056



Keep moving slide guide clear of wood fragments.

Gardez le guide de glissement propre de tout débris de bois.



Z94066

NOTE APPLY OIL OR GREASE UNTIL PAINT IS REMOVED

Z94040



Z94039

A CAUTION

- Read and understand Operator's Manual before using.
- Move controls in neutral, stop engine, set park brake, remove ignition key and wait for all moving parts to stop before sevicing, adjusting, repairing or maintaining.
- Install boom lock pin before servicing, repairing or maintaining.
- Do not allow anyone within 20 ft of machine during operation. Keep children away.
- Wear appropriate safety gear including but not limited to face shield, heavy gloves and steel toed shoes with slip resistant soles.
- Operate only on level ground.
- Do not operate on hillsides or when the working area is cluttered, wet, muddy or icy to prevent slipping or tripping.
- Do not place hands or feet between log and wedge/stripper or base.
- Keep all hydraulic components in good working order.
- Stop engine when leaving splitter unattended.
- Review safety instructions annually.

Z94030

Page 11



WALLENSTEIN Products Manufactured by:

EMB MFG Inc.

4144 Boomer Line St. Clements, Ontario Canada N0B 2M0 Phone: 1-877-695-9283

Fax: 519-699-4146 www.embmfg.com