

WX515 Trailer Log Splitter Parts Manual

Prior to S/N 251512 (WX515)
Prior to S/N 2E9US1116AS012002 (WX515-L)



Foreword

EMB Mfg. has prepared this parts manual to assist customers in ordering quality OEM replacement parts.

Proper and regular service and replacing old, worn or broken parts with the correct Wallenstein parts are essential to prolonging the life of your Wallenstein product. Please refer to this manual before ordering any replacement parts.


All information contained in this parts manual is based on the latest product specification available at the time of printing this manual. If your product differs from the specifications contained within this manual contact EMB Mfg. for information.

EMB reserves the right to alter specifications on their products at any time.

Reproduction of this parts manual of any kind is prohibited without prior written permission from EMB Mfg.


Table of Contents

Cylinder	4
Valve & Fittings	4
Main Parts	5
Hub	6
Valve	7
Engine & Pump	8
Light Kit (Optional)	9
Decal Breakdown	10

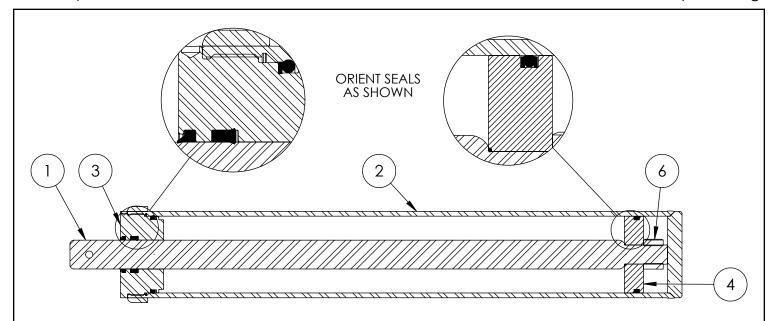


4" x 24" STROKE CYLINDER PARTS

ITEM	PART NO.	Description	QTY.
1	2011C1012	Rod, 1-1/2 x 1	1
2	2011C1014	Barrel, 4"	1
3	G400-150SA	4" Bore x 1-1/2" Rod Gland	1
4	P100-400SA	4" Bore Piston	1
5	SLK-4015	Seal Kit, 4 x 1-1/2	1
6	Z72292G8	Hex Lock Nut 1NF Grade 8	1

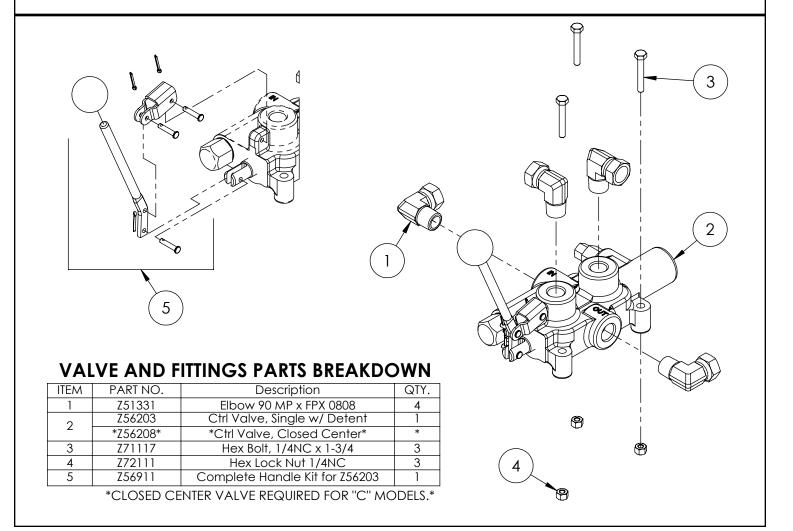

Page 4 Nov 2010

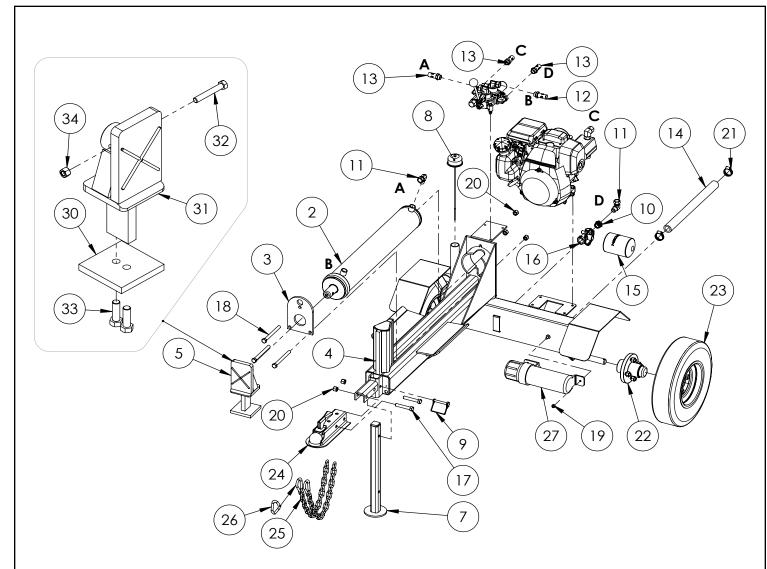


WX515 PARTS BREAKDOWN

ITEM	PART NO.	Description	QTY.
2	2011C101	Cylinder, 4 x 24 x 1-1/2	1
3	2014\$421	Plate, Cylinder Retaining (Bolt)	1
4	2015W501	WX515 Main Frame	1
5	2051A101	Assembly, Push Block	1
6	2051A103	Assembly, GC Engine to Pump	1
7	2052W206	Jack Stand, Front	1
8	2054A402	Breather cap dipstick	1
9	Z12431	Snapper Pin 3/8 x 2-1/4	1
10	Z51221	Reducer FP x MP 1208	1
11	Z51331	Elbow 90 MP x FPX 0808	2
12	Z52301	1/2 Hose MP08 x MP08 x 16"	1
13	Z52305	1/2 Hose, MP08 x MP08 x 24"	3
14	Z52404	Suction Hose, 1" x 18"	1
15	Z55301	Oil Filter - 3/4 - Particulate	1
16	Z55302	Filter Cap, 3/4 x 3/4	1
17	Z71530	Hex Bolt 1/2NC x 3	2
18	Z71555	Hex Bolt 1/2NC x 5-1/2	3
19	Z72221	Hex Lock Nut 5/16NC	1
20	Z72251	Hex Lock Nut 1/2NC	5
21	Z79401	Hose Clamp, #16	2
22	Z91202	Complete 4-Bolt Hub 1" Spindle	2
23	Z91301	4.80-8 LRB SportTrail 3-3/4 Solid	2
24	Z91614	2" Hitch Coupler	1
25	Z92303	Safety Chain 1/4 x 2' (includes Safety Snap)	2
26	Z92303-2	Safety Snap	2
27	Z96503	Manual Tube 3-1/2 Short	1


ITEM	PART NO.	Description	QTY.
30	20518117	Cap, Push Block (Bolt)	1
31	2051W102	Push Block, Bolted	1
32	Z71325	Hex Bolt 3/8NC x 2-1/2	1
33	Z71576	Hex Bolt 1/2NF x 1-1/2	2
34	Z72231	Hex Lock Nut 3/8NC	1

Nov 2010 Page 5

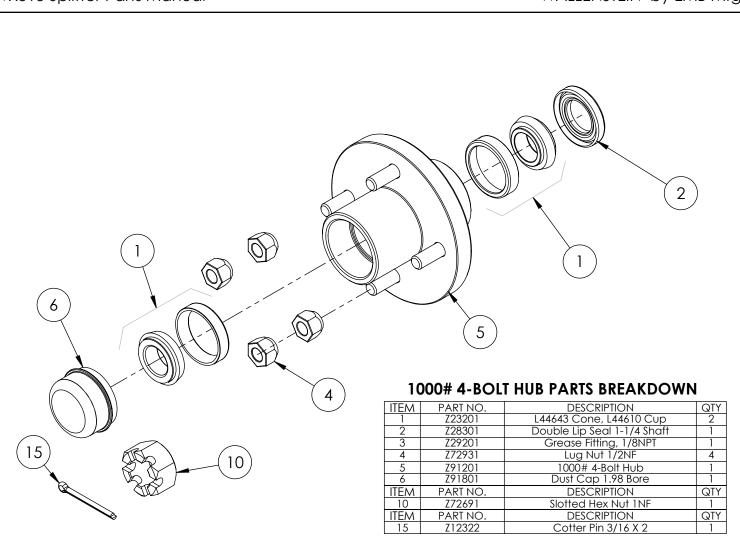


Page 6 Nov 2010

Z56203 Valve Breakdown

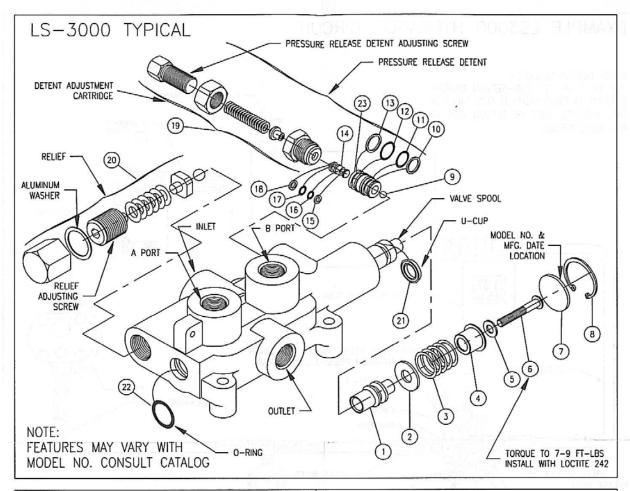


PLEASE NOTE: BEFORE REMOVING VALVE SPOOL OR SPOOL SLEEVE REMOVE DETENT	LS-3000 KITS AND CARTRIDGES			
ADJUSTING CART., DETENT PISTON AND STEEL BALL. INSTALL SPOOL AND SPOOL SLEEVE BEFORE REINSTALLING STEEL BALL.	ITEM	QTY	PART NO.	DESCRIPTION
PRESSURE RELEASE DETENT This feature provides a pressure release detent for the spool 'out' (handle in) position. When the spool is manually placed in the detent position oil is directed to the 'B' work port (the port away from the handle). When the pressure in the 'B' port reaches a preset level the detent will release and the spool will center. The factory setting is 1400 psi. The detent release pressure is adjustable by loosening the jam nut and turning the adjusting screw. Turning the adjusting screw clockwise will increase the detent release pressure and counterclockwise will decrease the detent release pressure. NOTE: if the detent release pressure is set too high the spool will not center, if the pressure is loo low the detent will not hold. If cap screw item 6 becomes loose detent will not function properly.	1 2 3 4 5 6 7 8 9 10 11 12 13 14	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	670700019 670500033 670500025 671400010 670500026 220000953 270001125 230001013 240019013 24000014 240019014 240019014 240019014	DETENT SLEEVE WASHER SPRING STOP CUP WASHER CAP SCREW SPACER SNAP RING STEEL BALL BACK-UP WASHER O-RING O-RING O-RING BACK-UP WASHER PISTON BACK-UP WASHER
RELIEF VALVE An adjustable ball spring relief valve is standard on all LS-3000 valves. The standard factory setting is 2250 psi @ 3 gpm and 120°F. Other settings can be specified. The relief pressure is adjusted by removing acorn nut, and turning the adjusting screw. Turning the adjusting screw clockwise will increase the pressure and counterclockwise will decrease the pressure (a pressure gauge must be installed in the inlet line whenever the relief pressure is adjusted). Do not backout adjusting screw to the point it falls out. WARNING: OVERPRESSURE MAY CAUSE SUDDEN AND UNEXPECTED FAILURE OF A COMPONENT IN THE HYDRAULIC SYSTEM RESULTING IN SERIOUS PERSONAL INJURY. ALWAYS USE A GAUGE WHEN ADJUSTING A RELIEF VALVE.	16 17 18 19 20 21 22 23	1 1 1 1 1 1 1 1 1 1	240015067 240016068 240019008 660330002 660125004 240016086 240000210 671100012 660530001 660330002 660130007 660130001	O-RING O-RING BACK-UP WASHER DETENT ADJUSTING CART. RELIEF KIT U-CUP O-RING PISTON SLEEVE LS-3000 SEAL KIT RELIEF KIT DETENT ADJUSTING CART. PRESSURE RELEASE DETENT KIT COMPLETE HANDLE KIT

Nov 2010 Page 7

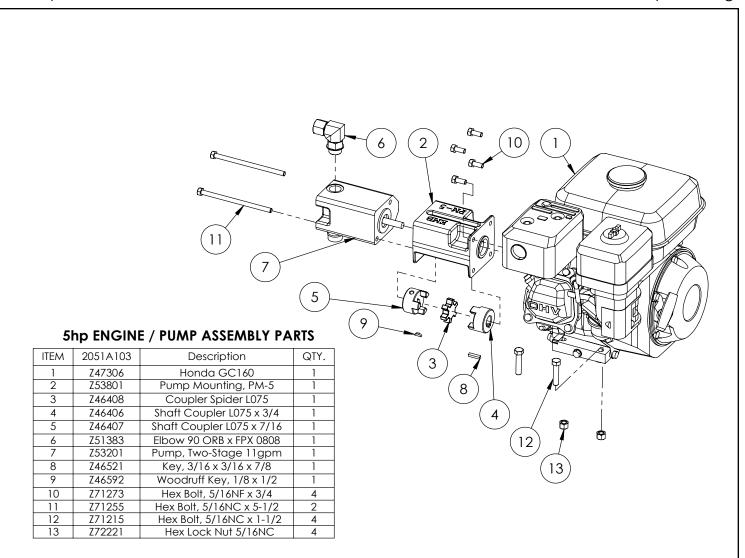


Page 8 Nov 2010

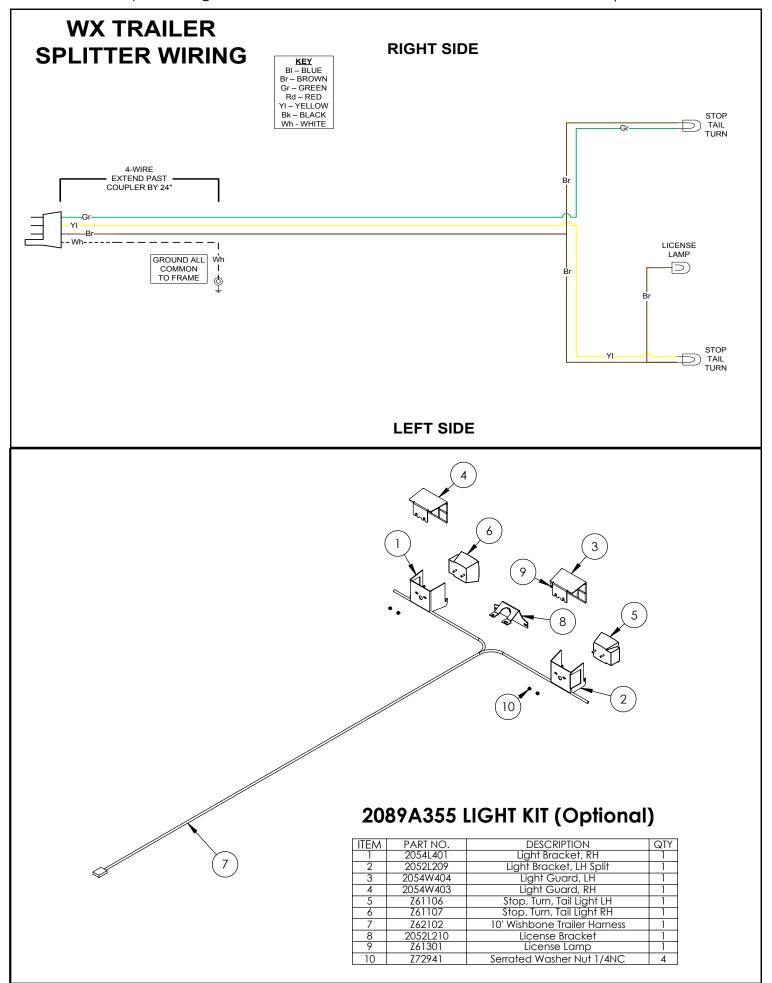


Nov 2010 Page 9

HORIZONTAL LOG SPLITTER DECAL BREAKDOWN

ITEM	PART NO.	DESCRIPTION	QTY
1	Z94039	CAUTION - Read Manual	1
2	Z94040	WARNING - Moving Wedge	2
3	Z94067	Clear Guide	2
4	Z94056	Wallenstein	2
5	Z94019	Made in Canada	3
6	Z94066	Apply Oil or Grease	1

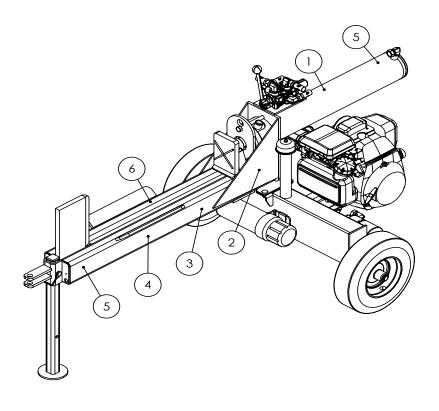

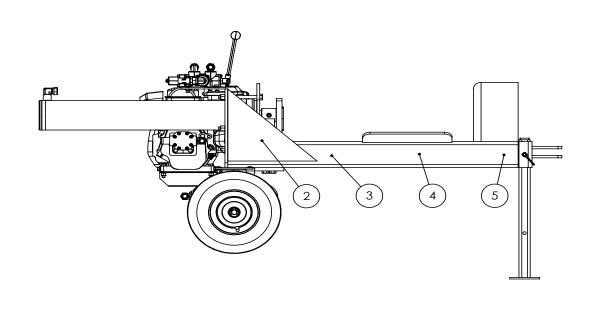

Page 10 Nov 2010

Trailer Splitter Decals

Z94056



Z94067

Keep moving slide guide clear of wood fragments.

Gardez le guide de glissement propre de tout débris de bois. Z94019



Z94066

NOTE APPLY OIL OR GREASE UNTIL PAINT IS REMOVED

Z94040



Z94039

A CAUTION

- Read and understand Operator's Manual before using.
- Move controls in neutral, stop engine, set park brake, remove ignition key and wait for all moving parts to stop before sevicing, adjusting, repairing or maintaining.
- Install boom lock pin before servicing, repairing or maintaining.
- Do not allow anyone within 20 ft of machine during operation. Keep children away.
- Wear appropriate safety gear including but not limited to face shield, heavy gloves and steel toed shoes with slip resistant soles.
- · Operate only on level ground.
- Do not operate on hillsides or when the working area is cluttered, wet, muddy or icy to prevent slipping or tripping.
- Do not place hands or feet between log and wedge/stripper or base.
- Keep all hydraulic components in good working order.
- Stop engine when leaving splitter unattended.
- Review safety instructions annually.

Z94030



WALLENSTEIN Products Manufactured by:

EMB MFG Inc.

4144 Boomer Line St. Clements, Ontario Canada N0B 2M0 Phone: 1-877-695-9283

Fax: 519-699-4146 www.embmfg.com