

BXM42 Chipper Parts Manual S/N 1M42188 & Later



Foreword

EMB Mfg. has prepared this parts manual to assist customers in ordering quality OEM replacement parts.

Proper and regular service and replacing old, worn or broken parts with the correct OEM parts are essential to prolonging the life of your EMB product. Please refer to this manual before ordering any replacement parts.


All information contained in this parts manual is based on the latest product specification available at the time of printing this manual. If your product differs from the specifications contained within this manual contact EMB Mfg. for information.


EMB reserves the right to alter specifications on their products at any time.


Reproduction of this parts manual of any kind is prohibited without prior written permission from EMB Mfg.

Table of Contents

  Driveline	5
Main Parts	7
Rotor	8
Discharge Chute	9
Binacchi PTO Parts Breakdown	10
Decal Breakdown	12



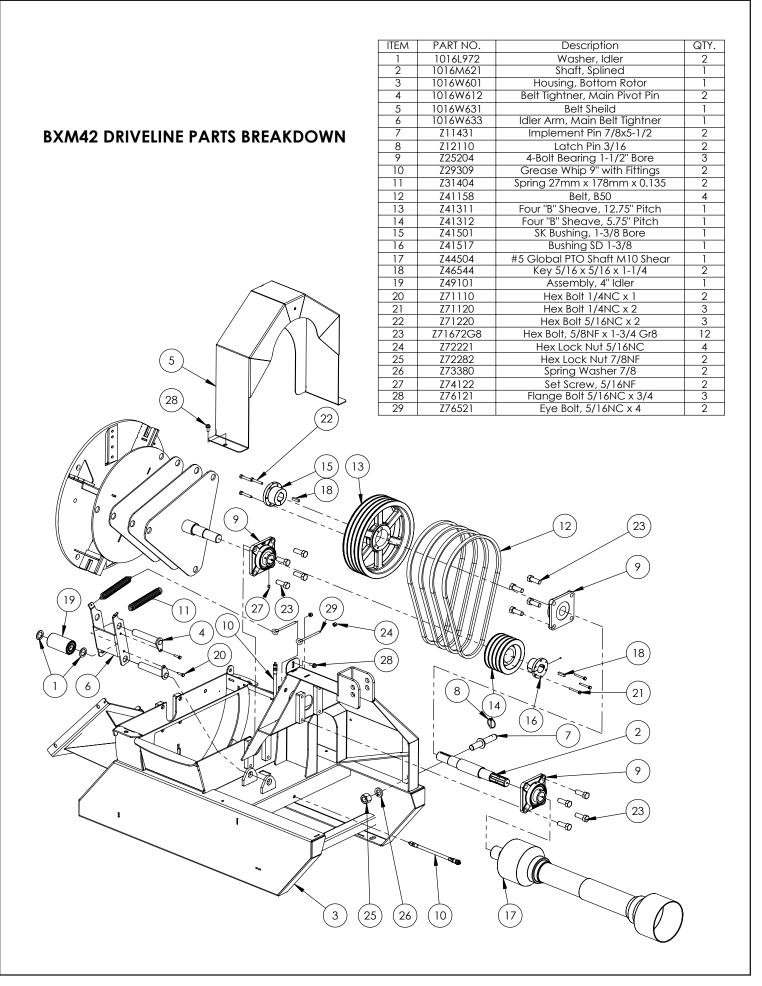





ITEM

1016W634


Chop Block


Flap, Hopper

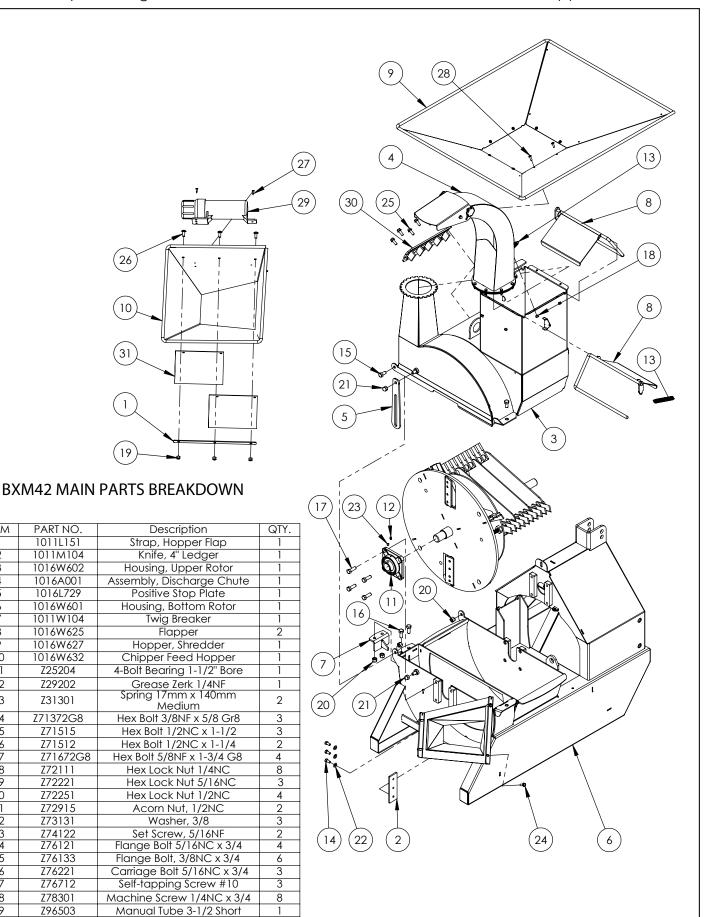

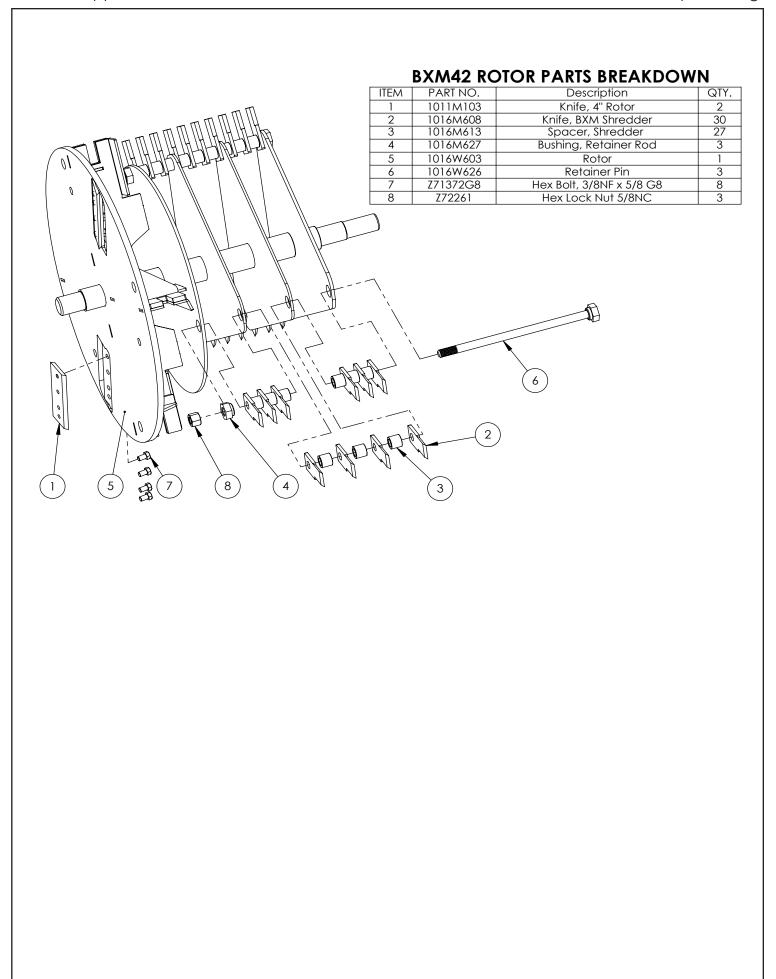


Page 8 April 2011

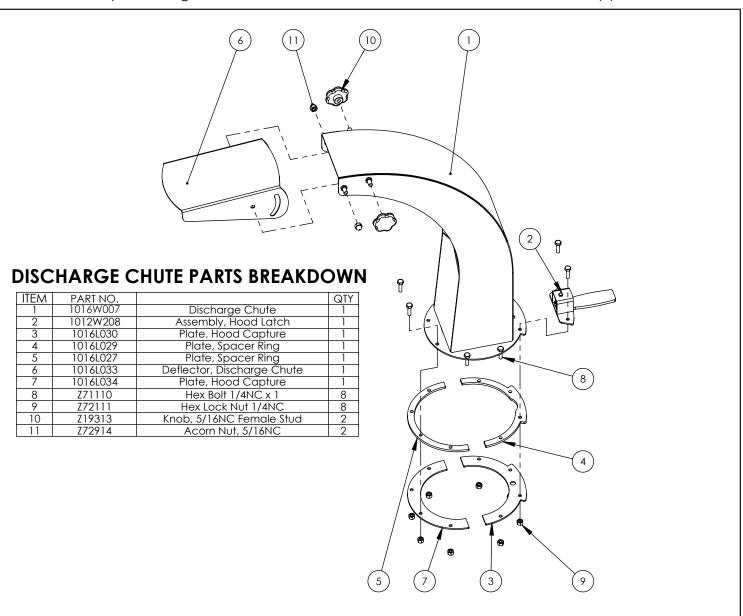

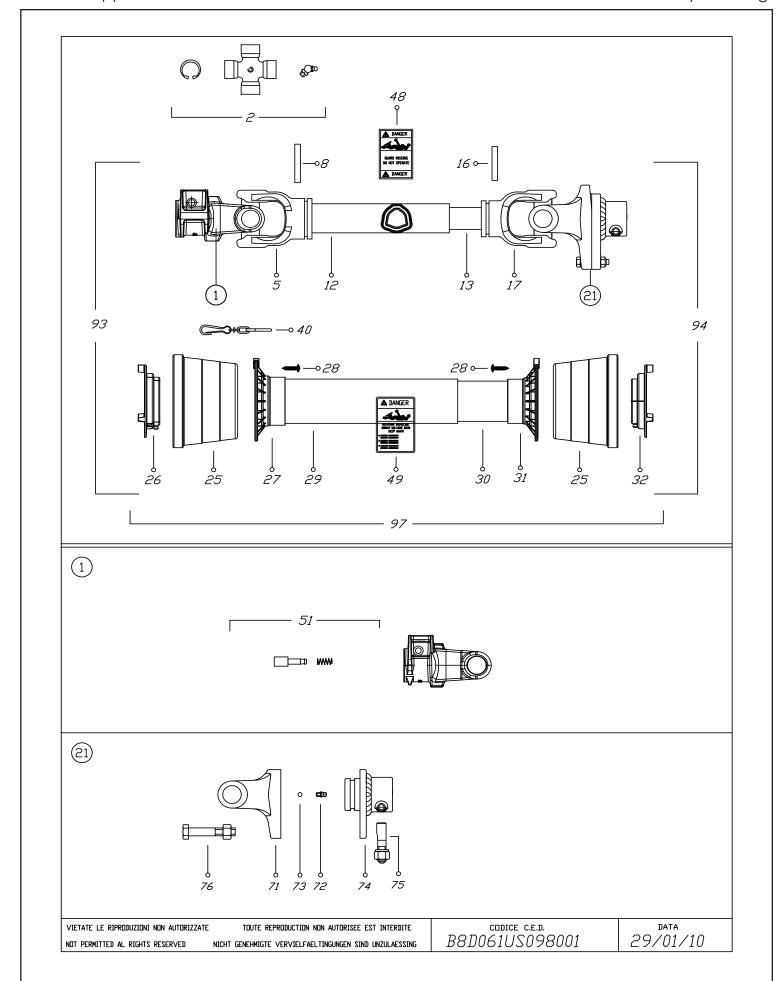

Binacchi SPARE PARTS LIST : B5D056US098001				
POS.	DESCRIPTION	Q.	Part #	
01	YOKE	1	0800503	
02	CROSS JOURNAL ASS.	2	08205	
05	OUTER TUBE YOKE	1	08005021	
80	FLEXIBLE PIN	1	098701075	
12	CM. 100 CARDAN TUBE(*)	1	09881523100	
13	CM. 100 CARDAN TUBE(*)	1	09881454100	
16	FLEXIBLE PIN	1	0987001065	
17	INNER TUBE YOKE	1	08005011	
21	SHEAR BOLT YOKE	1	08805A604633	
25	CONE SHIELD BELL 05-06	2	021906C001	
26	OUTER BEARING 05	1	025505C001	
27	OUTER BASE CONE 05-06	1	025406C001	
28	SCREW	6	0998052242	
29	OUTER SAFETY TUBE	1	0988981NB5056	
30	INNER SAFETY TUBE	1	0988975NB5056	
31	INNER BASE CONE 05-06	1	025406C002	
32	INNER BEARING 05	1	025505C002	
40	CHAIN	1	0252000001	
48	LABEL DANGER OUTER DRIVE TUBE	1	09872006	
49	EXTERNAL SHIELD LABEL	1	09872003	
51	COMPLETE PUSH BUTTTON	1	0986014047	
71	YOKE FOR LB5	1	08896905	
72	GREASE NIPPLE	1	0984010150	
73	STEEL BALL	23	098680104	
74	HUB	1	088965A60	
75	PUSH PIN SET	1	0986014075	
76	SHEAR BOLT AND NUT M10 x 1.5 x 55 10.9	1	Z19407 (Package of 5)	
93	OUTER HALF SHAFT	1	B5056US2	
94	INNER HALF SHAFT	1	B5056US1098001	
97	SAFETY GUARD	1	083US05056	

00111

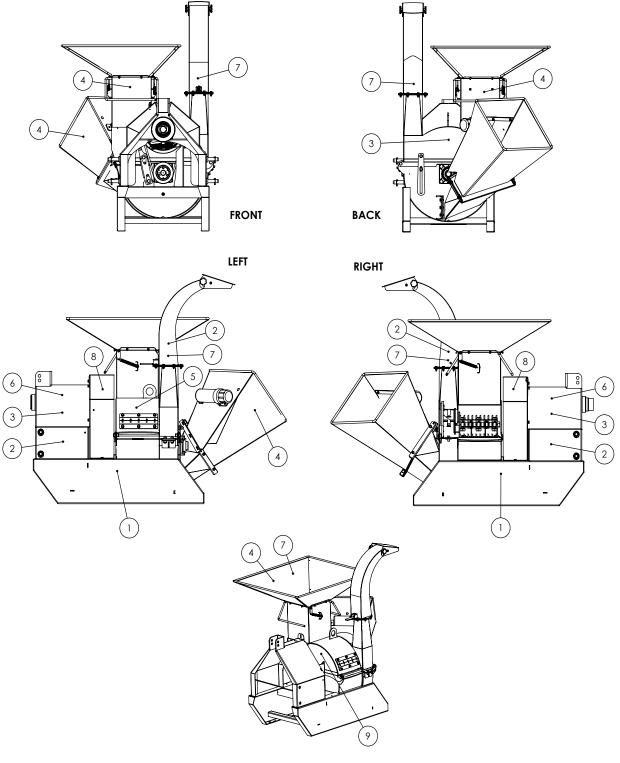

Page 12 April 2011

Decals BXM42

Z94056



Z94061



Z94019



Z94006

A CAUTION

Read and understand operator's manual befor starting. Review safety instructions annually.



- Close and secure rotor cover before operating
- Close and secure all guards, deflectors and shields before starting and operating.
- Keep hydraulic lines and fittings tight, in good condition and free
- Keep hands, feet, hair and clothing away from moving parts. Never wear loose clothing around machinery.

 Keep driveline universal joint angles equal and small as possible.
- Do not point discharge at people, animals or buildings. Rotor can expel wood chips fast enough to cause injury.
- Do not run machine inside a closed building to prevent asphyxiation from engine exhaust.
- rrom engine exhaust.
 Use care when feeding material into chipper. Do not send metal, bottles, cans, rocks, glass or other foreign material into wood chipper. If foreign material enters chipper, stop the machine, turn engine off and place ignition key in your pocket and wait for all moving parts to stop before removing material and/or unplugging. Inspect machine for damaged or loose parts before returning to work.
- Do not place hands or any body parts into feed hopper during
- Do not move or transport chipper when the rotor is turning.

Do not exceed a safe travel speed when transporting. Cross safety chain under hitch on trailer model when attaching to a truck.

Z94007



794012



ROTATING PART HAZARD KEEP AWAY

To prevent serious injury or death from rotating parts:

- Turn machine off, stop and disable engine, remove ignition key and place in your pocket, set park brake and wait for all moving parts to stop before adjusting, servicing, maintaining, repairing or unplugging.
- Close and secure guard before operating.
- Keep hands, feet, hair and clothing away from moving parts.

Z94009



To prevent serious injury or death from

- rotating driveline: Keep all guards in place when operating.
 Operate only at 540 RPM.

away from moving parts.

- . Keep hands, feet, hair and clothing
- Keep U-joint angles equal and small
- Do not exceed driveline manufacturers recommended operating length.

Z94013



Do not operate without guards and

Z94008



To prevent serious injury or death from


thrown objects:

- Turn machine off, stop and disable en-gine, remove ignition key and place in your pocket, set park brake and wait for all moving parts to stop before adjusting, servicing, maintaining repairing or un-plugging.
- Do not direct discharge duct towards people, animals or property. Always wear appropriate safety gear. Keep hands and feet out of discharge openings.

Keep others away.

TWO PANEL BXM42 DECAL BREAKDOWN

ITEM	PART NO.	DESCRIPTION	QTY
1	Z94056	WALLENSTEIN Decal	2
2	Z94019	1" Dia. Made In Canada	4
3	Z94061	BXM42 WALLENSTEIN	3
4	Z94120	DANGER - Rotating Blades	5
5	Z94006	CAUTION - Read Manual	1
6	Z94118	DANGER - Rotating Driveline Hazard	2
7	Z94117	DANGER - Thrown Object Hazard	4
8	Z94116	WARNING - Rotating Part Hazard	2
9	Z94127	DANGER - Missing Guard	1
10	Z94143	121 dB Noise Level	1
11	Z94144	RH Rotation	1
12	Z94145	LH Rotation	1

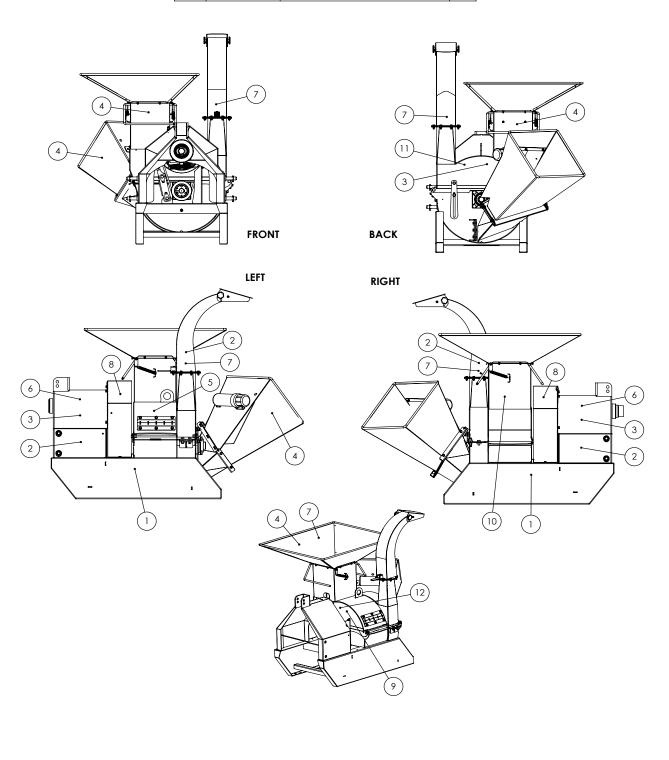

Page 14 April 2011

Two Panel Decals BXM42





Z94056





 
Z94118








Z94144



Z94145

 

Z94117



Z94116



Z94120



Z94119





WALLENSTEIN Products Manufactured by:

EMB MFG Inc.

4144 Boomer Line St. Clements, Ontario Canada N0B 2M0 Phone: 1-877-695-9283

Fax: 519-699-4146 www.embmfg.com