

# WX320 Tractor Mount Splitter Parts Manual Prior to S/N 232032



#### **Foreword**

EMB Mfg. has prepared this parts manual to assist customers in ordering quality OEM replacement parts.

Proper and regular service and replacing old, worn or broken parts with the correct Wallenstein parts are essential to prolonging the life of your Wallenstein product. Please refer to this manual before ordering any replacement parts.


All information contained in this parts manual is based on the latest product specification available at the time of printing this manual. If your product differs from the specifications contained within this manual contact EMB Mfg. for information.

EMB reserves the right to alter specifications on their products at any time.

Reproduction of this parts manual of any kind is prohibited without prior written permission from EMB Mfg.

#### **Table of Contents**


Cylinder	4
Main Parts	5
Valve and Fittings	6
Valve	7
4-Way Wedge (Optional)	9
Decal Breakdown	10

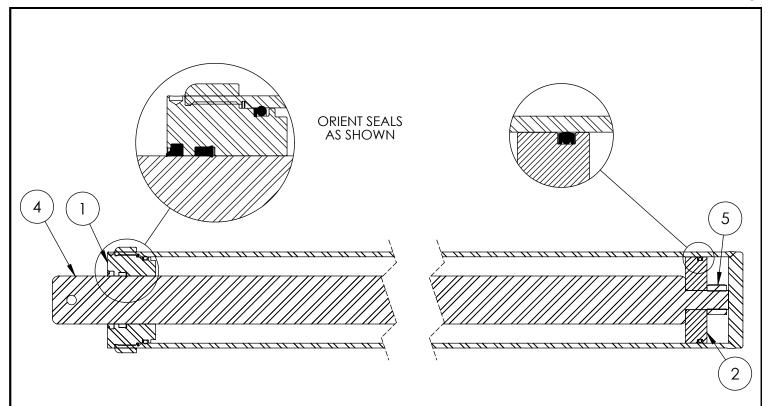

#### 4-1/2" x 36" STROKE CYLINDER PARTS

ITEM	PART NO.	DESCRIPTION	QTY
1	G450-250SA	4-1/2" Bore x 2-1/2" Rod Gland With Seals	1
2	P100-450SA	4-1/2" Bore Piston With Seals	1
3	2032C2011	Barrel, 4-1/2"	1
4	2032C2013	Rod,2-1/2x 1	1
5	Z72292G8	Hex Lock Nut 1NF Grade 8	1
6	SLK-4525	Seal Kit, 4-1/2 x 2-1/2	1

Page 4 Nov 2010

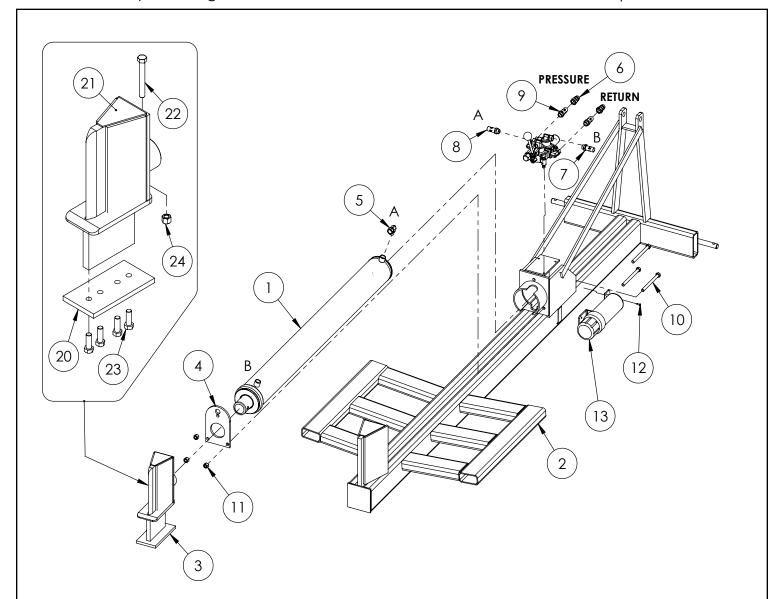


#### WX320 Main Parts Breakdown

ITEM	WX320	Description	QTY.
1	2032C201	Cylinder, 4-1/2 x 36" x 2-1/2	1
2	2012W202	Weldment, Main Frame	1
3	2032A202	Wedge, Large Sliding Assy	1
4	2032\$213	Plate, Cylinder Retaining	1
5	Z51331	Elbow 90 MP x FPX 0808	1
6	Z51903	FP08 x Pioneer Coupler	2
7	Z52301	1/2 Hose MP08 x MP08 x 16"	1
8			1
0	Z52303	1/2 Hose MP08 x MP08 x 36"	'
9	Z52312	1/2 Hose, 1/2MPx1/2MPx 96"	2
10	Z71560	Hex Bolt 1/2NC x 6	3
11	Z72251	Hex Lock Nut 1/2NC	3
12	Z76712	Self-tapping Screw #10	1
13	Z96503	Manual Tube 3-1/2 Short	1


ITEM	PART NO.	Description	QTY.
20	2014S414	Plate, Sliding Wedge Capture	1
21	2032W203	Wedge, Large Sliding	1
22	Z71540	Hex Bolt 1/2NC x 4	1
23	Z71576	Hex Bolt 1/2NF x 1-1/2	4
24	Z72251	Hex Lock Nut 1/2NC	1

Nov 2010 Page 5

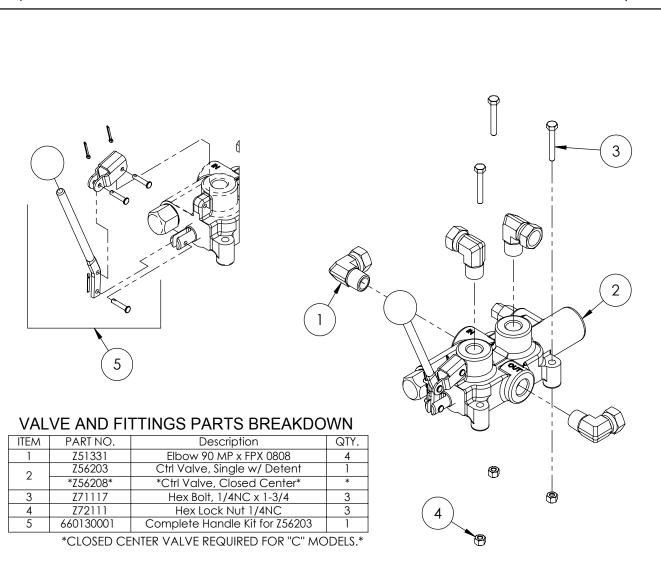


Page 6 Nov 2010

#### **Z56203 Valve Breakdown**

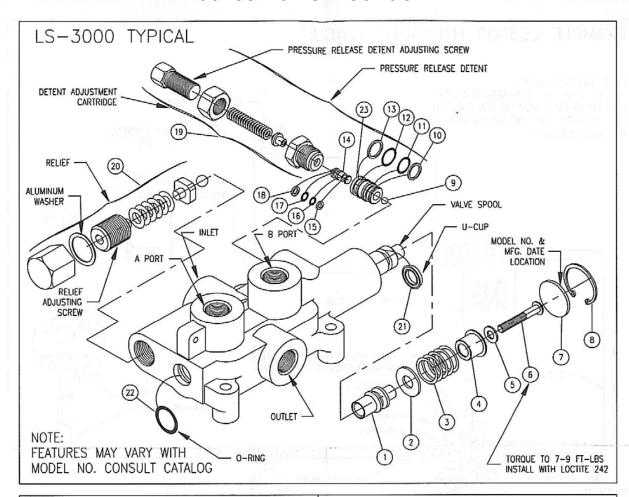

PLEASE NOTE: BEFORE REMOVING VALVE SPOOL OR SPOOL SLEEVE REMOVE DETENT ADJUSTING CART., DETENT PISTON AND STEEL BALL. INSTALL SPOOL AND		LS-3000 KITS AND CARTRIDGES		
PRESSURE RELEASE DETENT This feature provides a pressure release detent for the spool 'out' (handle in) position. When the spool is manually placed in the detent position oil is directed to the 'B' work port (the port away from the handle). When the pressure in the 'B' port reaches a preset level the detent will release and the spool will center. The factory setting is 1400 psi. The detent release pressure is adjustable by loosening the jam nut and turning the adjusting screw. Turning the adjusting screw clockwise will increase the detent release pressure and counterclockwise will decrease the detent release pressure. NOTE: if the detent release pressure is too low the detent will not hold. If cap screw item 6 becomes loose detent will not hold. If cap screw item 6 becomes loose detent will not function properly.  RELIEF VALVE An adjustable ball spring relief valve is standard on all LS-3000 valves. The standard factory setting is 2250 psi @ 3 gpm and 120°F.  Other settings can be specified. The relief pressure is adjusted by removing acorn nut, and turning the adjusting screw. Turning the adjusting screw clockwise will increase the pressure and counterclockwise will decrease the pressure (a pressure gauge must be installed in the inlet line whenever the relief pressure is adjusted). Do not backout adjusting screw to the point it falls out.  WARNING: OVERPRESSURE MAY CAUSE SUDDEN AND UNEXPECTED FAILURE OF A COMPONENT IN THE HYDRAULIC SYSTEM RESULTING IN SERIOUS PERSONAL INJURY. ALWAYS USE A GAUGE WHEN ADJUSTING A RELIEF VALVE.	1 2 3 4 5 6 7 8 9 10 11 12 13 14 5 16 17 18 19 20 21 22 23	OTY  1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	660530001 660125004 660130007 660130001	DESCRIPTION  DETENT SLEEVE WASHER SPRING STOP CUP WASHER CAP SCREW SPACER SNAP RING STEEL BALL BACK-UP WASHER O-RING BACK-UP WASHER PISTON BACK-UP WASHER O-RING O-RING O-RING BACK-UP WASHER PISTON BACK-UP WASHER O-RING O-RING PISTON BACK-UP WASHER DETENT ADJUSTING CART. RELIEF KIT U-CUP O-RING PISTON SLEEVE LS-3000 SEAL KIT RELIEF KIT DETENT ADJUSTING CART. PRESSURE RELEASE DETENT KIT COMPLETE HANDLE KIT



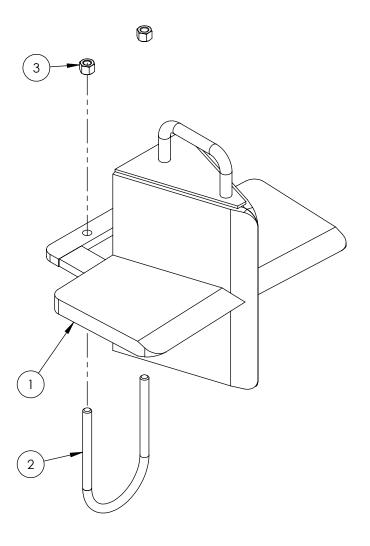


#### W4130 4-Way Wedge (Optional)


ITEM	PART NO.	DESCRIPTION	QTY
1	2082W301	Weldment, Main 4-Way	1
2	2082\$307	U-Bolt, 3 x 4	1
3	Z72231	Hex Lock Nut 3/8NC	2


Nov 2010 Page 9

#### WX320/330 DECAL BREAKDOWN

ITEM	PART NO.	DESCRIPTION	QTY
1	Z94039	CAUTION - Read Manual	1
2	Z94040	WARNING - Moving Wedge	2
3	Z94067	Clear Guide	2
4	Z94056	Wallenstein	2
5	Z94019	Made in Canada	3
6	Z94066	Apply Oil or Grease	1

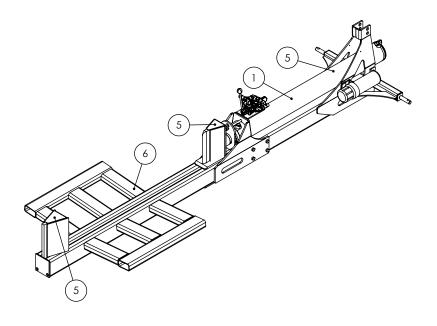

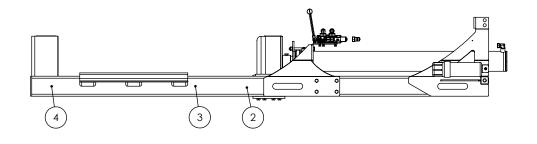

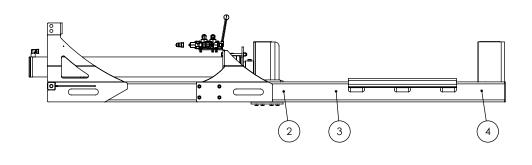

Page 10 Nov 2010

#### **3PH Splitter Decals**

Z94056



Z94067

Keep moving slide guide clear of wood fragments. Gardez le guide de glissement propre de tout débris de bois. Z94019



Z94066

## NOTE APPLY OIL OR GREASE UNTIL PAINT IS REMOVED

 
Z94040



Z94039

### **A** CAUTION

- Read and understand Operator's Manual before using.
- Move controls in neutral, stop engine, set park brake, remove ignition ke



- Install boom lock pin before servicing, repairing or maintaining.
- Do not allow anyone within 20 ft of machine during operation. Keep children away.
- Wear appropriate safety gear including but not limited to face shield, heavy gloves and steel toed shoes with slip resistant soles.
- Operate only on level ground.
- Do not operate on hillsides or when the working area is cluttered, wet, muddy or icy to prevent slipping or tripping.
- Do not place hands or feet between log and wedge/stripper or base.
- Keep all hydraulic components in good working order.
- Stop engine when leaving splitter unattended.
- Review safety instructions annually.

Z94039



#### **WALLENSTEIN Products Manufactured by:**

#### EMB MFG Inc.

4144 Boomer Line St. Clements, Ontario Canada N0B 2M0 Phone: 1-877-695-9283

Fax: 519-699-4146 www.embmfg.com