As well as the ECN update, please update the parts

EMB Manufacturing Inc. 4144 Boomer Line ·St. Clements, On ·N0B 2M0 ·Canada Ph: (519) 699-9283 ·Fax: (519) 699-4146

www.embmfg.com

update serial per ECN

WX510 Trailer Log Splitter Parts Manual

this address block should appear in all parts books

S/N 230001 & After





Refer to the operators manual for safe operation and maintainance

REV should appear here in all parts books

Foreword

EMB Mfg. has prepared this parts manual to assist customers in ordering quality OEM replacement parts.

Proper and regular service and replacing old, worn or broken parts with the correct Wallenstein parts are essential to prolonging the life of your Wallenstein product. Please refer to this manual before ordering any replacement parts.

All information contained in this parts manual is based on the latest product specification available at the time of printing this manual. If your product differs from the specifications contained within this manual contact EMB Mfg. for information.

EMB reserves the right to alter specifications on their products at any time.

Reproduction of this parts manual of any kind is prohibited without prior written permission from EMB Mfg.

For parts and information please contact your dealer. If your dealer is no longer available please go to our website: http://www.embmfg.com and click on "FIND A DEALER NEAR YOU" for information on a local dealer.

Rev is from ECN, date is DDMMYY, current date

This footer should appear on all pages (except cover) in all parts books with the appropriate rev and date

Page 2

For threaded parts installation, refer to the torque charts in this manual.

Table of Contents

Cylinder	4
Main Parts	5
Valve	6
Valve & Fittings	8
Engine & Pump	9
Decal Breakdown	10

Bolt Torque

CHECKING BOLT TORQUE

The tables shown below give correct torque values for various bolts and capscrews. Tighten all bolts to the torques specified in chart unless otherwise noted. Check tightness of bolts periodically, using bolt torque chart as a guide. Replace hardware with the same strength bolt.

Torque figures indicated above are valid for non-greased or non-oiled threads and heads unless otherwise specified. Therefore, do not grease or oil bolts or capscrews unless otherwise specified in this manual. When using locking elements, increase torque values by 5%.

 
* Torque value for bolts and capscrews are identified by their head markings.

ENGLISH TOPOUE SPECIFICATIONS

this page should be in all parts books (copy from WX510 manual)

(copy non			DOIL IV	orque	-		
ual)		2		SAE 5		SAE 8 (N.m) (lb-ft)	
A	(111.111)	(ID-IL)	(14.111)	(ID-IL)	(14.111)	(ID-IL)	
1/4"	8	6	12	9	17	12	
5/16"	13	10	25	19	36	27	
3/8"	27	20	45	33	63	45	
7/16"	41	30	72	53	100	75	
1/2"	61	45	110	80	155	115	
9/16"	95	60	155	115	220	165	
5/8"	128	95	215	160	305	220	
3/4"	225	165	390	290	540	400	
7/8"	230	170	570	420	880	650	
1"	345	225	850	630	1320	970	

Bolt Torque*





SAE-2



SAE-5



SAE-8


METRIC TORQUE SPECIFICATIONS

Bolt	Bolt Torque*			
Diameter	_	8.8).9
"A"	(N.m)	(lb-ft)	(N.m)	(lb-ft)
M3	.5	.4	1.8	1.3
M4	3	2.2	4.5	3.3
M5	6	4	9	7
M6	10	7	15	11
M8	25	18	35	26
M10	50	37	70	52
M12	90	66	125	92
M14	140	103	200	148
M16	225	166	310	229
M20	435	321	610	450
M24	750	553	1050	774
M30	1495	1103	2100	1550
M36	2600	1917	3675	2710

Hydraulic Fitting Torque


Tightening FI	are Type Tube Fittin	gs *	Tube Size	Nut Size Across		orque alue•	Recomr Turns To		
	e and flare seat for de cause leakage.	fects	OD Floto					er Finger ntening)	
2. Align tube	with fitting before tigh	this page s	should be	e in all part	S	(lb-ft)	(Flats)	(Turn)	
ing.				VX510 mai		6	1	1/6	
3. Lubricate d	connection and hand					9	1	1/6	
	vel nut until snug.					12	1	1/6	
agracii em	voi mat antii onag.					18	1	1/6	
4 To prevent	twisting the tube(s), u	ise	··· -	.,,	لپ	34	1	1/6	
•	nes. Place one wrend		5/8	1	62	46	1	1/6	
	nector body and with		3/4	1-1/4	102	75	3/4	1/8	
second tigl	nten the swivel nut to		7/8	1-3/8	122	90	3/4	1/8	
torque sho	torque shown.			The torque v	/alues s	shown are h	nased on		


The torque values shown are based on lubricated connections as in reassembly.

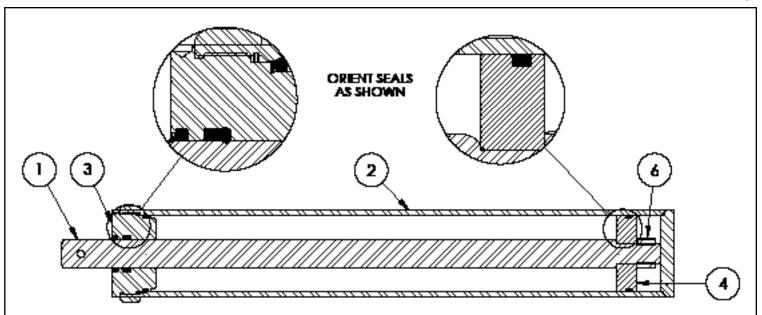



4" x 24" STROKE CYLINDER PARTS

ПЕМ	PART NO.	Description	QIY.
ı	2011C1012	Rod, 1-1/2 x 1	1
2	2011C101A	Barrel, Æ	1
3	G400-1505A	Af Bare x 1-1/2" Rod Gland	1
A	P100-4005A	A" Bare Piston	1
5	5LK-4015	Seal Lit, 4 x 1-1/2	1
6	772292C8	Hex Lock Nut 1NF Grade 8	1

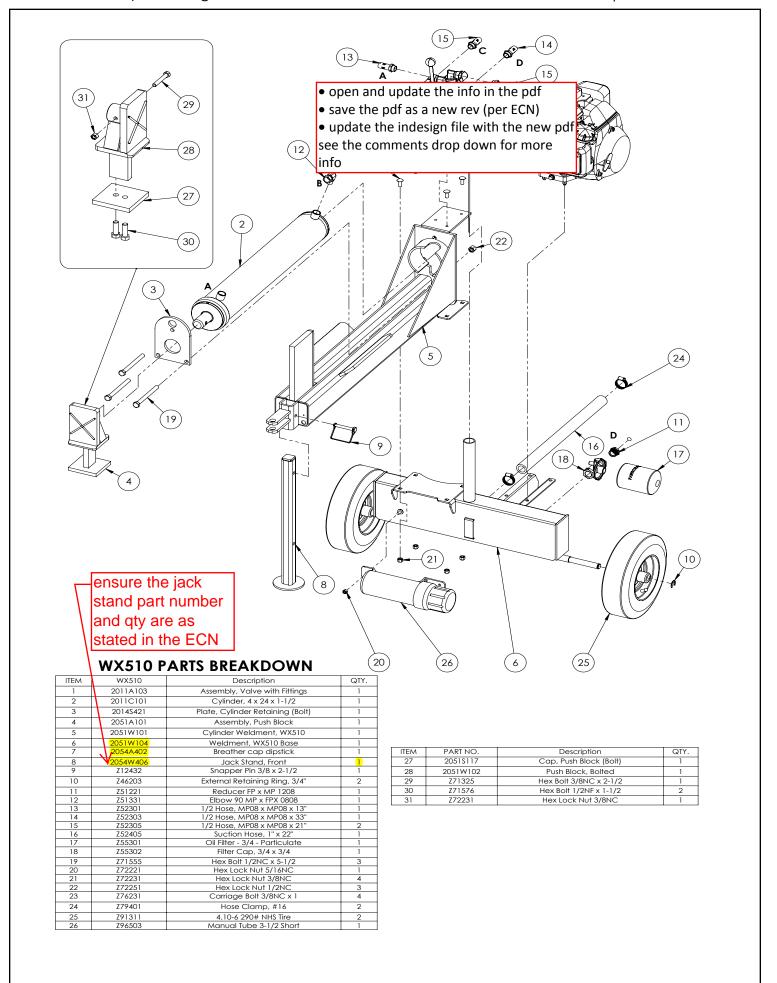

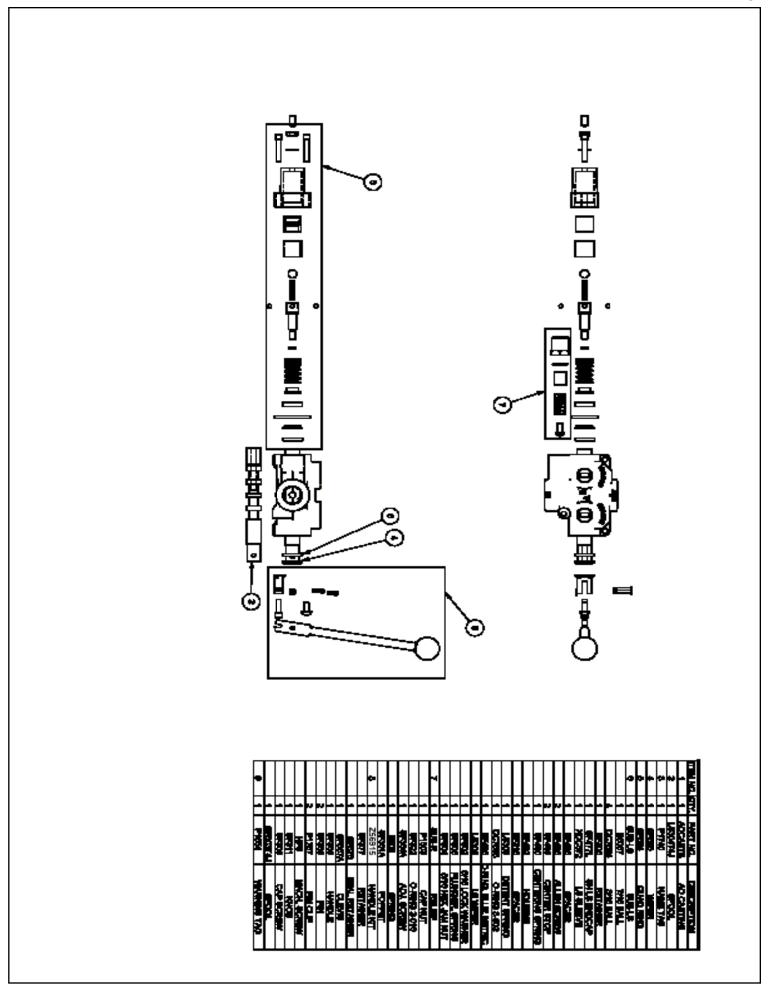

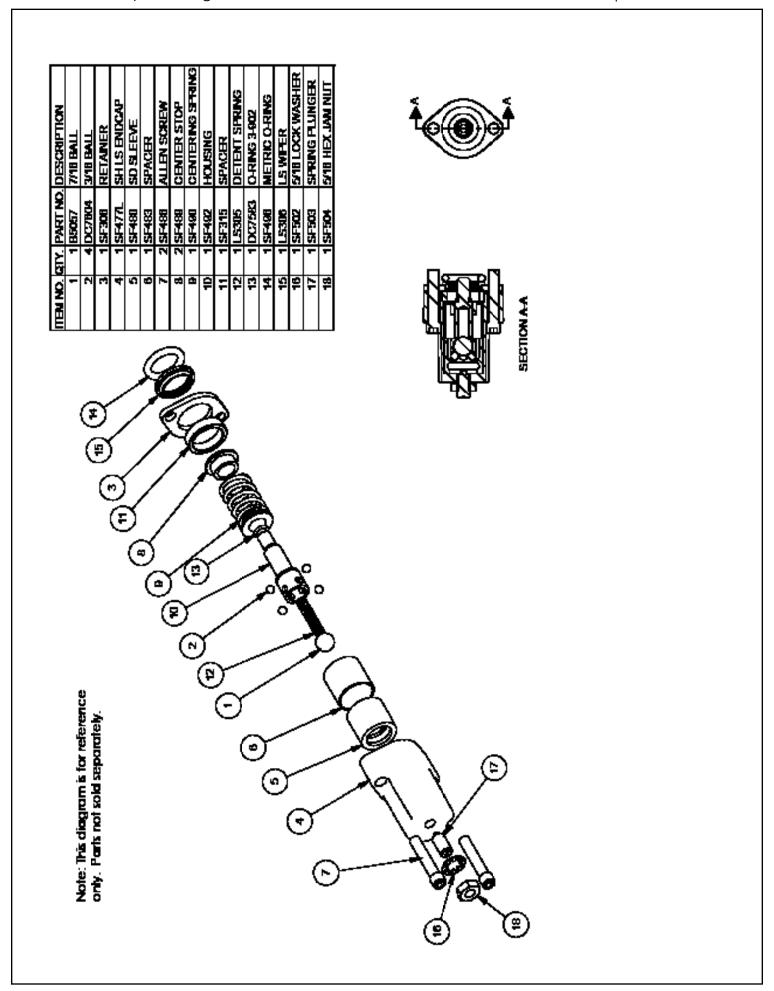


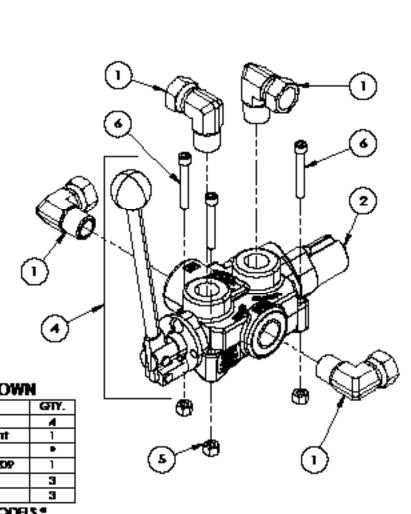

VALVE AND FITTINGS PARTS BREAKDOWN

MEM.	PART NO.	Description	GTY.
1	Z51331	Ebow 90 MP x FPE CBCB	4
2	754209	Valve, Single Function Detent	1
3	754210*	Volve, Closed Center	•
A	Z56915	Complete Handle Kit for 754209	1
5	<i>1</i> 72111	Hex Lock Nut 1/4NC	3
6	1751 IA	SHC3, 1/ANC x 1-8/A	3

"CLOSED CENTER VALVE REQUIRED FOR "C" MODELS."

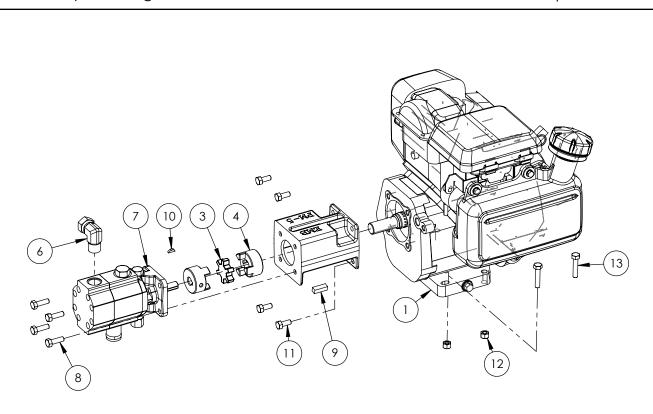



2051A104 PARTS BREAKDOWN

ITEM	PART NO.	DESCRIPTION	QTY
1	Z47306	Honda GC160 Engine	1
2	Z53801	Pump Mounting, PM-5	1
3	Z46408	Coupler Spider L075	1
4	Z46406	Shaft Coupler L075 x 3/4	1
5	Z46410	Shaft Coupler L075 x 1/2	1
6	Z51331	Elbow 90 MP x FPX 0808	1
7	Z53204	Pump, 11gpm Two-Stage	1
8	Z71210	Hex Bolt 5/16NC x 1	4
9	Z46542	Key 5/16 x 5/16 x 1	1
10	Z46592	Woodruff Key, 1/8 x 1/2	1
11	Z71273	Hex Bolt, 5/16NF x 3/4	4
12	Z72221	Hex Lock Nut 5/16NC	4
13	Z71215	Hex Bolt, 5/16NC x 1-1/2	4


HORIZONTAL LOG SPLITTER DECAL BREAKDOWN

ITEM	PART NO.	DESCRIPTION	QTY
1	Z94039	CAUTION - Read Manual	1
2	Z94040	WARNING - Moving Wedge	2
3	Z94067	Clear Guide	2
4	Z94056	Wallenstein	2
5	Z94019	Made in Canada	3
6	Z94066	Apply Oil or Grease	1

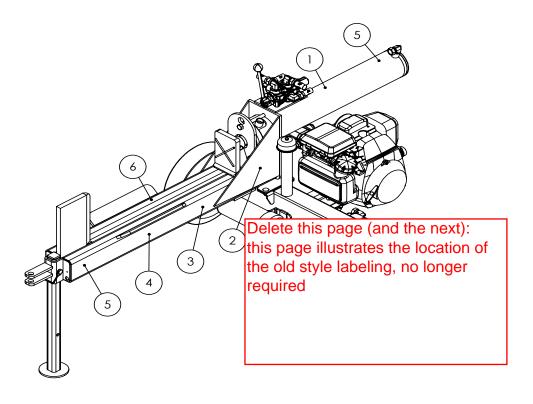

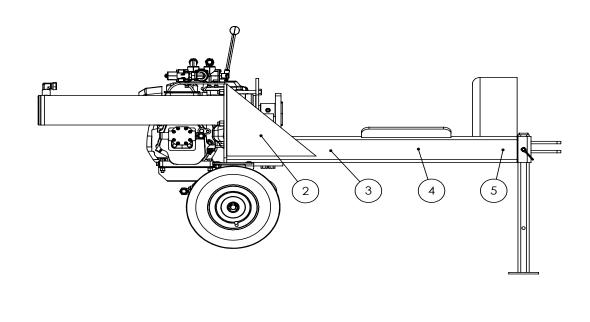

Trailer Splitter Decals

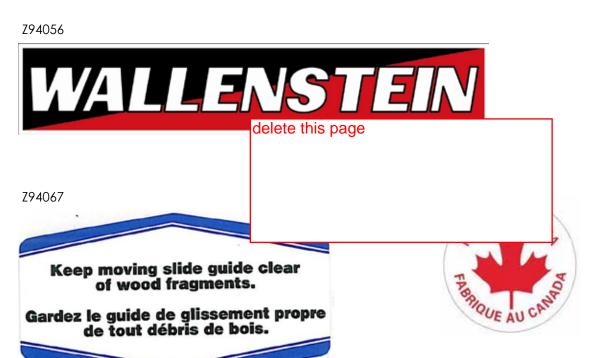

Z94066

NOTE APPLY OIL OR GREASE UNTIL PAINT IS REMOVED

Z94040



Z94039


A CAUTION


- Read and understand Operator's Manual before using.
- Move controls in neutral, stop engine, set park brake, remove ignition key and wait for all moving parts to stop before sevicing,
- adjusting, repairing or maintaining.
 Install boom lock pin before servicing, repairing or maintaining.
- Do not allow anyone within 20 ft of machine during operation. Keep children away.
- Wear appropriate safety gear including but not limited to face shield, heavy gloves and steel toed shoes with slip resistant soles.
- Operate only on level ground.
- Do not operate on hillsides or when the working area is cluttered, wet, muddy or icy to prevent slipping or tripping.
- Do not place hands or feet between log and wedge/stripper or base.
- Keep all hydraulic components in good working order.
- Stop engine when leaving splitter unattended.
- · Review safety instructions annually.

Z94039

TWO PANEL HORIZONTAL LOG SPLITTER DECAL BREAKDOWN

ITEM	PART NO.	DESCRIPTION	QTY
1	Z94119	CAUTION - Read Manual	1
2	Z94123	Keep Feet Clear	1
3	Z94067	Clear Guide	2
4	Z94056	Wallenstein	2
5	Z94019	Made in Canada	3
6	Z94142	99 dB Sound Level	1
7	Z94124	Keep Hands Clear	1

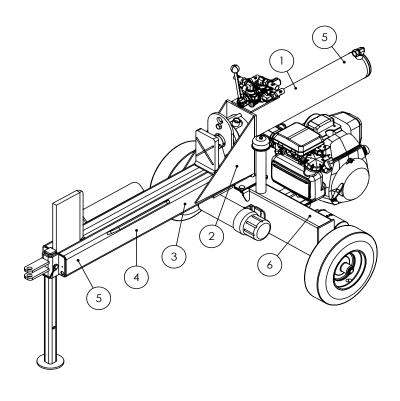

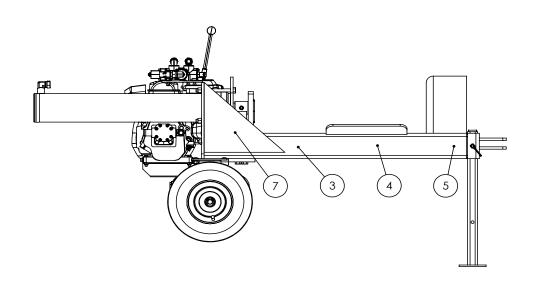

Two Panel Trailer Splitter Decals

Z94019



Z94142



Z94067

Keep moving slide guide clear of wood fragments. Gardez le guide de glissement propre de tout débris de bois.

Z94056



Z94119



Z94123



Z94124





WALLENSTEIN Products Manufactured by:

EMB MFG Inc.

4144 Boomer Line St. Clements, Ontario Canada NOB 2MO Phone: 1-877-695-9283

Fax: 519-699-4146 www.embmfg.com