


PARTS MANUAL

Serial Number 900001 & up

WX370 / WX370C 3PH LOG SPLITTER

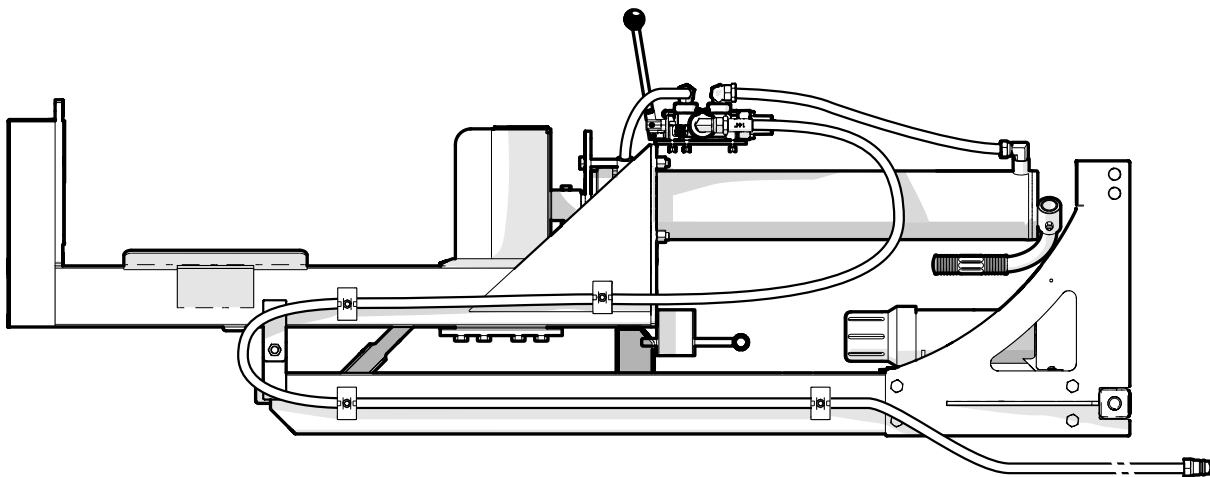

Foreword

This Wallenstein parts manual is prepared to assist customers in ordering quality OEM replacement parts.

Regular maintenance combined with replacing old, worn or broken parts with the correct OEM parts is essential in prolonging the life of your Wallenstein product. Refer to this manual to identify replacement parts.

To order parts, contact your Wallenstein dealer or distributor. Have the product model and serial number handy.

If your dealer is no longer available, please go to our website: <http://wallensteinequipment.com> and click on the [Dealer Locator](#) to find the nearest dealer.

All information contained in this parts manual is current as per the revision date at the bottom of the page. Wallenstein reserves the right to change product specifications at any time without notice.

If your product specifications differ from those contained in this manual, contact Wallenstein for current information.

Reproduction of information in this parts manual is prohibited without prior written permission from Wallenstein Equipment Inc.

Wallenstein Equipment Inc. • © 2019



WARNING!

Refer to the operators manual for safe operation and maintenance.

Maintenance should be performed by trained personnel only.


Serial Number Location

Always provide the model and serial number of your Wallenstein product when ordering parts or requesting service or other information. This information is found on the product information plate as shown below.

Record your product information here for future reference.

Model _____

Serial Number _____

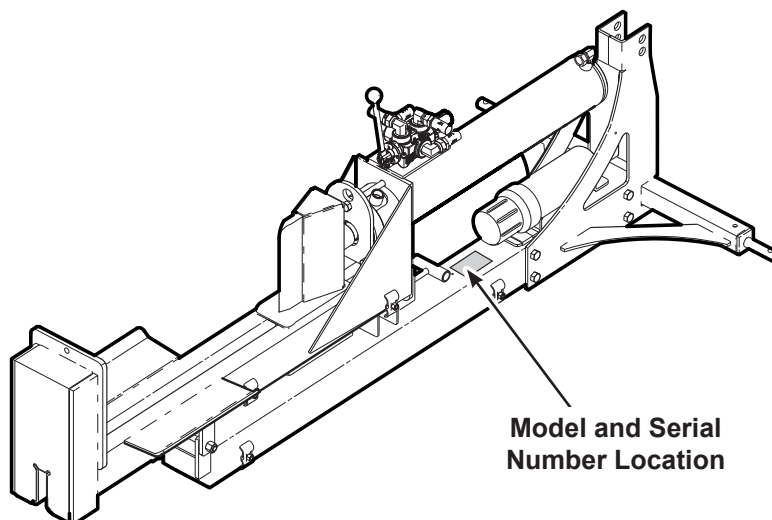

www.wallensteinequipment.com

Contents

Main Parts4

Valve Assembly – WX3705

Valve Assembly – WX370C.....5

Valve Service Kit6

Cylinder Detail6

Hydraulic Circuit7


Accessories8

Decal Layout.....9

Common Bolt Torque Values10

Hydraulic Fitting Torque Values 11

Main Parts

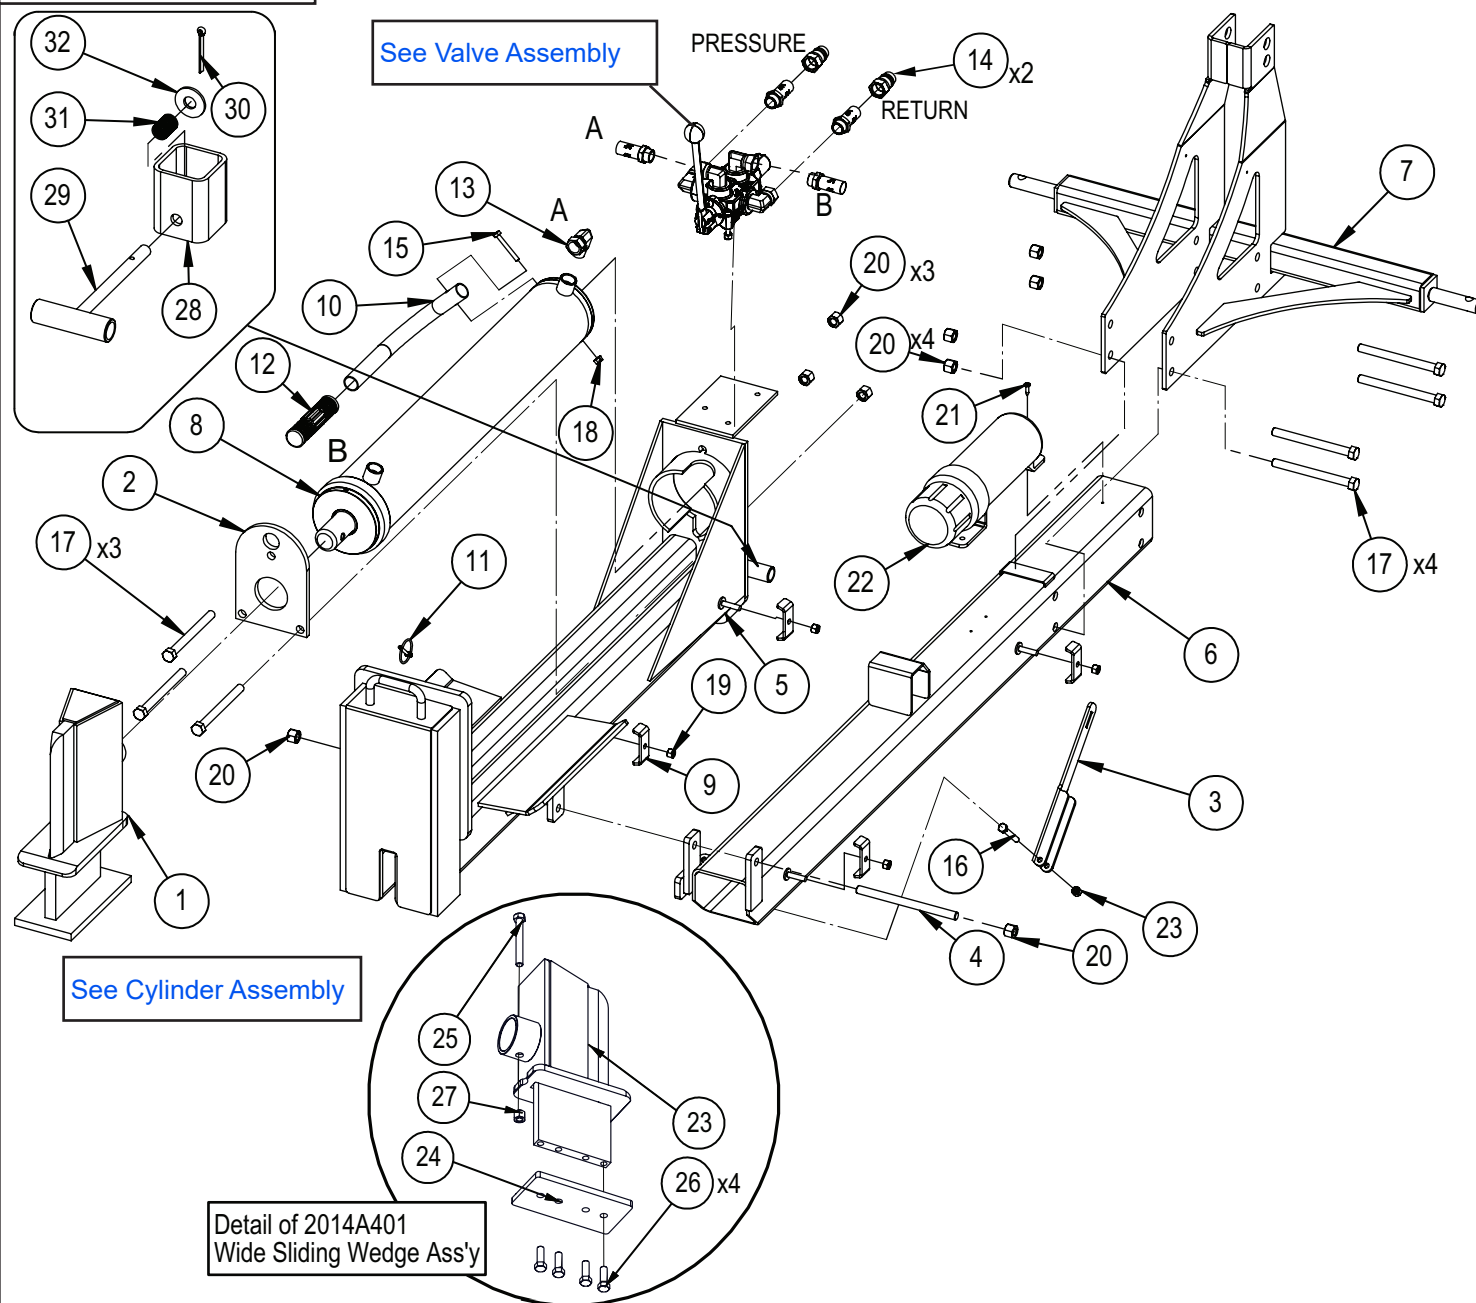


Item No.	Part No.	Description	Qty
1	2014A401	Wide Sliding Wedge Assembly	1
2	2014S421	Plate, Cylinder Retaining (Bolt)	1
3	2016L002	Locking Latch	1
4	2016M602	Pin, Pivot Threaded	1
5	2016W601	WX370 H/V Base	1
6	2016W605	Main Base, WX370	1
7	2016W606	3pt Clamp-on	1
8	2054C401	Cylinder, 4 x 24 x 1-1/2 with Handle	1
9	2054L412	Clamp, Two Hose x 1/2"	4
10	2054S414	Handle, Lift	1
11	Z12110	Lynch Pin, 3/16"	1
12	Z19321	Handle Grip, 1"	1
13	Z51331	Elbow 90, MP x FFX 0808	1
14	Z51926	Quick Coupler, FP08 x M ISO 7241-1	2
15	Z71120	Hex Bolt, 1/4NC x 2"	1
16	Z71225	Hex Bolt, 5/16NC x 2-1/2"	1
17	Z71555	Hex Bolt, 1/2NC x 5-1/2"	7

Item No.	Part No.	Description	Qty
18	Z72211	Hex Lock Nut, 1/4NC	1
19	Z72221	Hex Lock Nut, 5/16NC	5
20	Z72251	Hex Lock Nut, 1/2NC	9
21	Z76721	Self-tapping Screw, 1/4" x 3/4"	1
22	Z96503	Manual Tube, 3-1/2" Short	1
23	2014W402	Sliding Wedge	1
24	2014S414	Plate, Sliding Wedge Capture	1
25	Z71325	Hex Bolt, 3/8NC x 2-1/2"	1
26	Z71576G8	Hex Bolt, 1/2NF x 1-1/2" G8	4
27	Z72231	Hex Lock Nut, 3/8NC	1
28	2016S604	Housing, Latch Spring	1
29	2016W603	Handle, Spring Latch	1
30	Z12321	Cotter Pin, 3/16" x 1-3/4"	1
31	Z32301	Comp Spring, 0.720" OD x 3" x 0.063"	1
32	Z73251	USS Washer, 1/2"	1

Valve Assembly – WX370

Open Center Valve Assembly P/N Z56209

Item No.	Part No.	Description	Qty
1	Z51331	Elbow 90 MP x FPX 0808	4
2	LS304T4J	Spool, Open Center Valve	1
3	Z72211	Hex Lock Nut, 1/4NC	3
4	Z75114	SHCS, 1/4NC x 1-3/4"	3

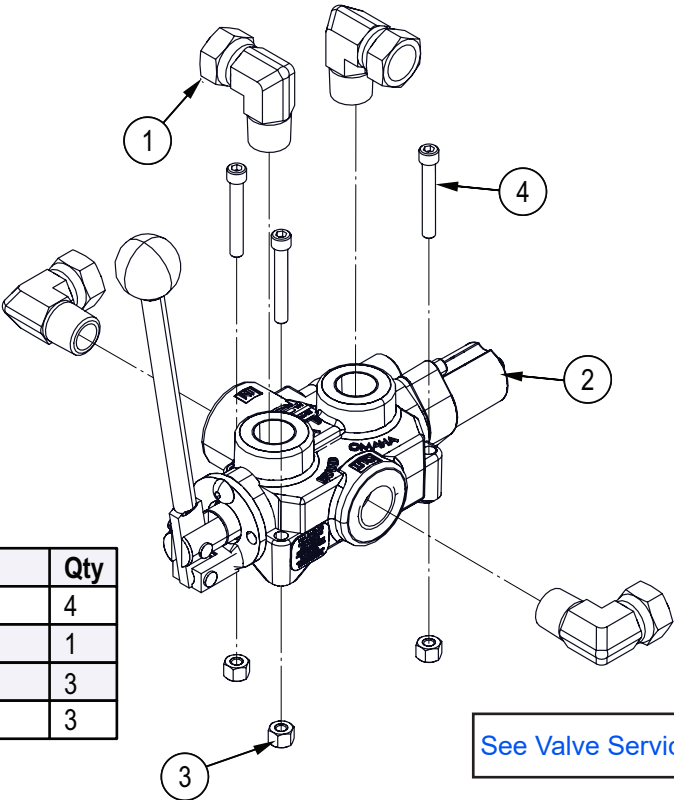


See Valve Service Kit

Valve Assembly – WX370C


Closed Center Valve Assembly P/N Z56210

Item No.	Part No.	Description	Qty
1	Z51331	Elbow 90 MP x FPX 0808	4
2	LS304C4J	Spool, Closed Center Valve	1
3	Z72211	Hex Lock Nut, 1/4NC	3
4	Z75114	SHCS, 1/4NC x 1-3/4"	3


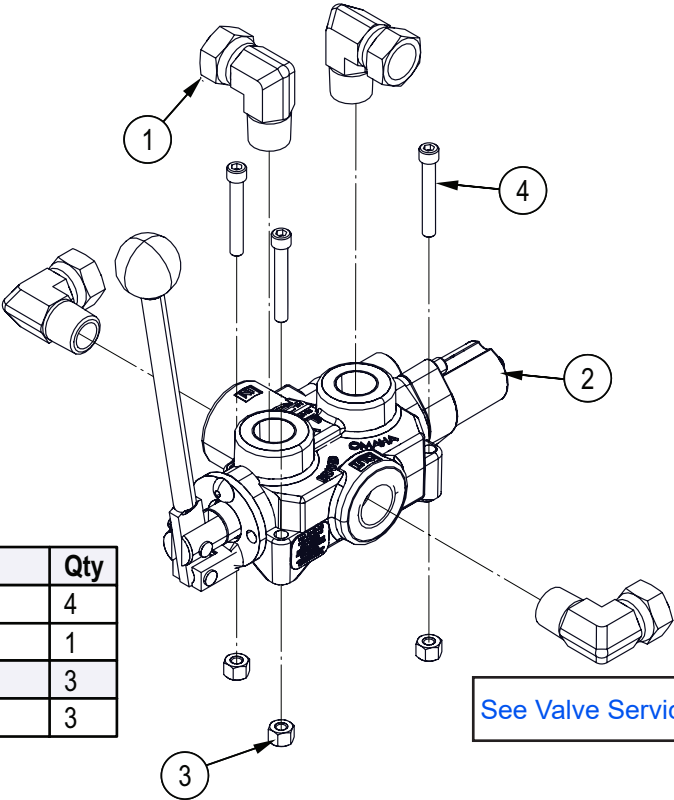


See Valve Service Kit

Valve Service Kit

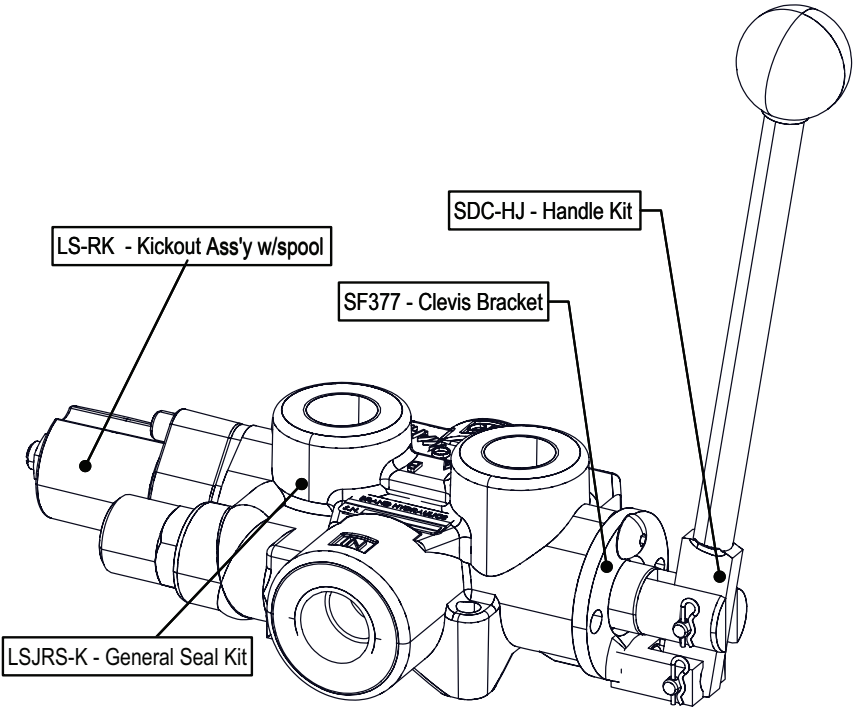


Cylinder Detail

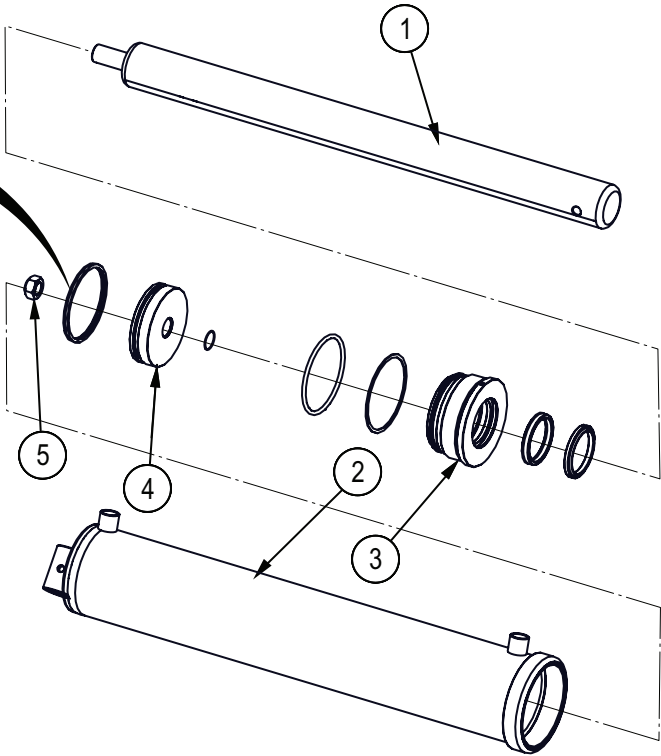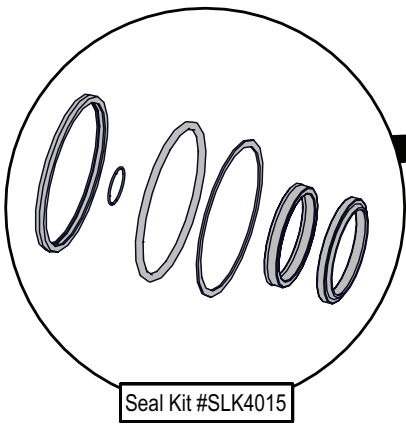





Item No.	Part No.	Description	Qty
1	2011C1012	Rod, 1-1/2 x 1	1
2	2054C1015	Barrel with Handle	1
3	G400-150S	Gland, 4" x 1-1/2"	1
4	P100-400SP	Piston, 4" Bore	1
5	Z72276	Hex Lock Nut, 1NF GR8	1

Hydraulic Circuit

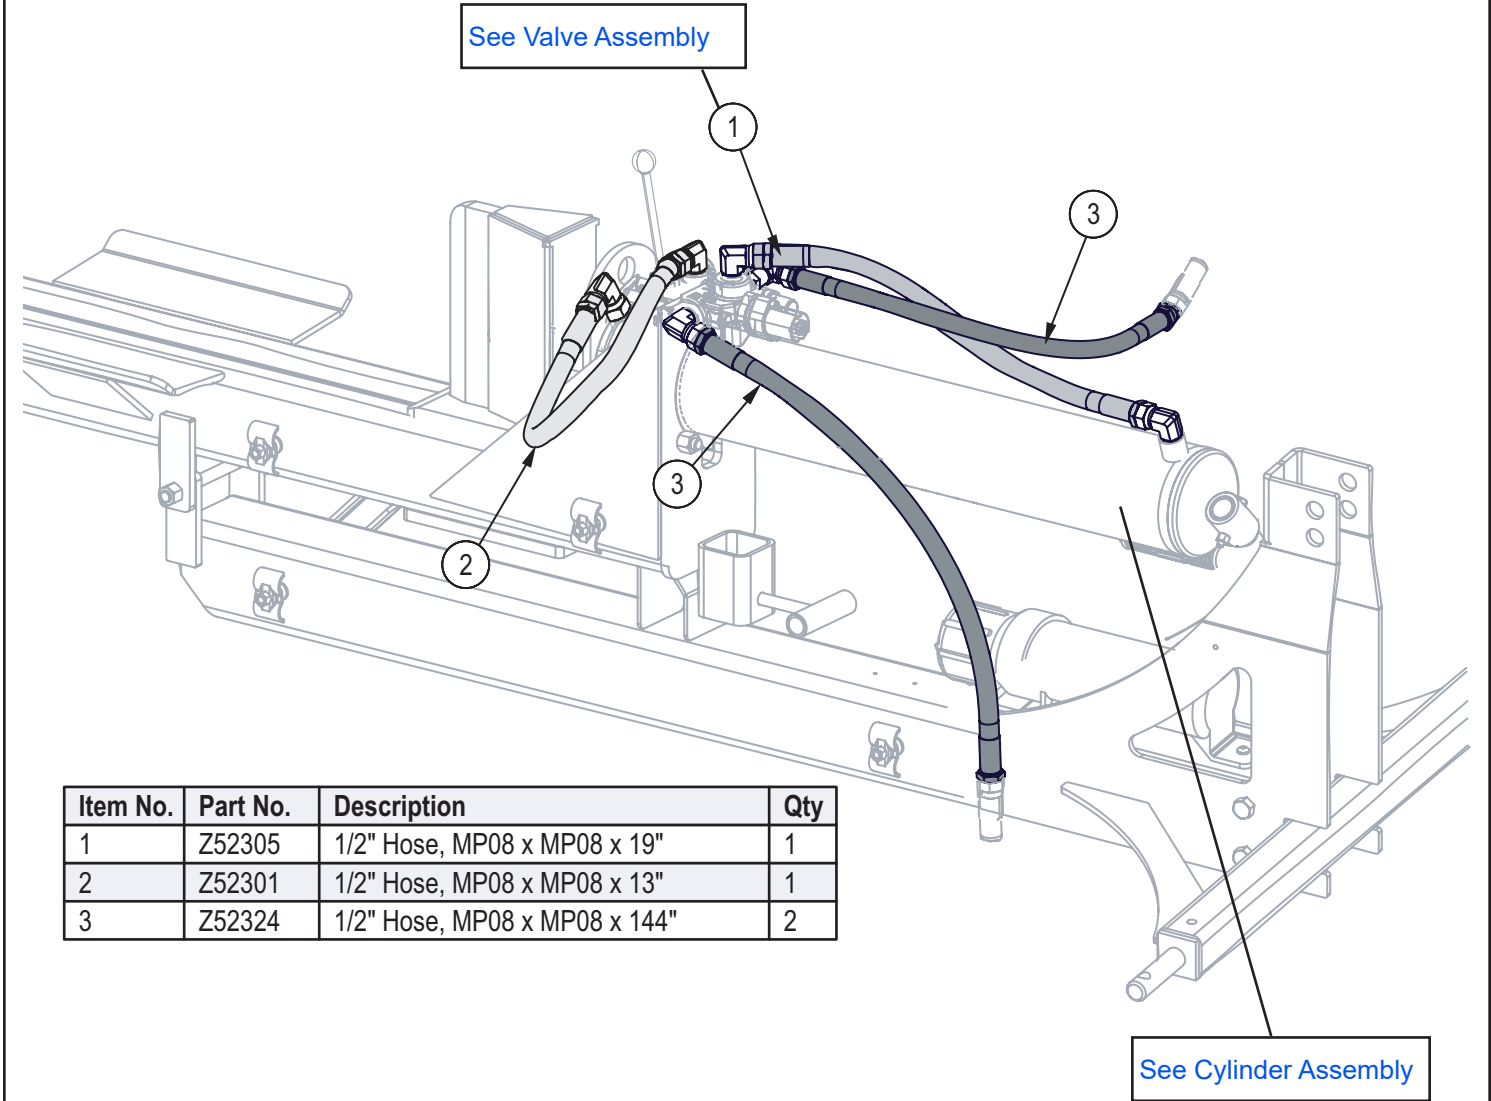

Accessories


Call your dealer for pricing and availability

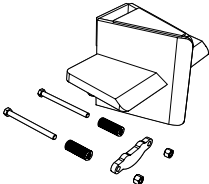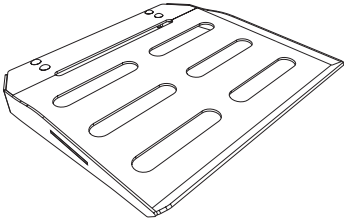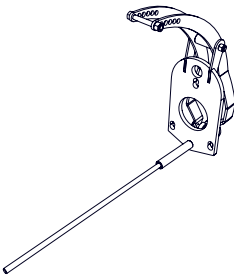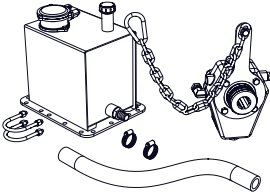	<p>4-Way Wedge– P/N W4120</p> <p>Boost your productivity and make quick work out of logs by splitting four pieces at once. This is an ideal way to save time.</p>
	<p>Clamp-on Shelf Extension – P/N W4211</p> <p>A great way to add versatility to your splitter.</p>
	<p>Splitter Stroke Limiter – P/N W4213</p> <p>Manually set your return stroke. Great for short pieces, saves time and gets your splitting job done even faster!</p>
	<p>Hydraulic Pump Kit – P/N W4180</p> <p>Provides hydraulic power for tractors without available auxiliary power.</p>

Decal Layout

IMPORTANT! If parts are replaced that have safety signs on them, new signs must be applied. Safety signs must always be replaced if they become damaged, are removed, or become illegible.

Safety signs are included in the product decal kit available from your authorized dealer. Decals are not available separately.

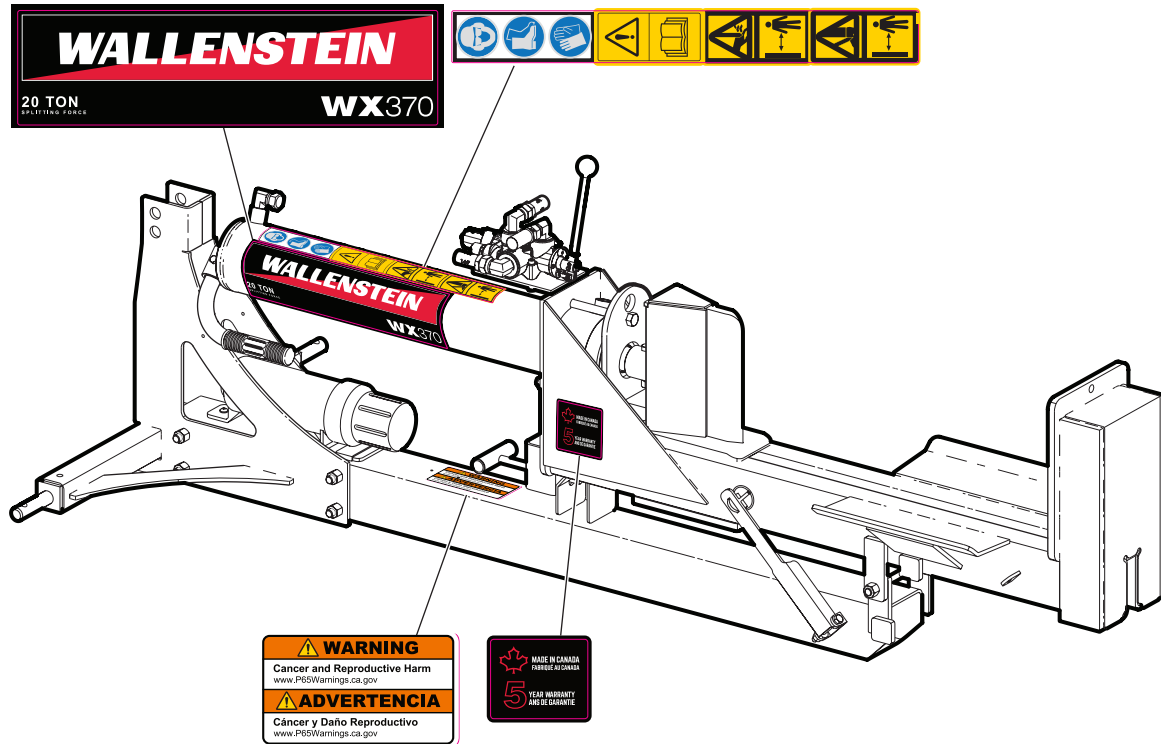

Common Bolt Torque Values

Checking Bolt Torque

The tables shown give correct torque values for various bolts and capscrews. Tighten all bolts to the torque values specified in the table, unless indicated otherwise. Check tightness of bolts periodically.

IMPORTANT! If replacing hardware, use fasteners of the same grade.

IMPORTANT! Torque figures indicated in the table are for non-greased or non-oiled threads. Do not grease or oil threads unless indicated otherwise. When using a thread locker, increase torque values by 5%.



NOTE: Bolt grades are identified by their head markings.

Imperial Bolt Torque Specifications

Bolt Diameter	Torque Value					
	SAE Gr. 2		SAE Gr. 5		SAE Gr. 8	
	lbf•ft	N•m	lbf•ft	N•m	lbf•ft	N•m
1/4"	6	8	9	12	12	17
5/16"	10	13	19	25	27	36
3/8"	20	27	33	45	45	63
7/16"	30	41	53	72	75	100
1/2"	45	61	80	110	115	155
9/16"	60	95	115	155	165	220
5/8"	95	128	160	215	220	305
3/4"	165	225	290	390	400	540
7/8"	170	230	420	570	650	880
1"	225	345	630	850	970	1320



SAE Gr. 2



SAE Gr. 5



SAE Gr. 8

Metric Bolt Torque Specifications

Bolt Diameter	Torque Value			
	Gr. 8.8		Gr. 10.9	
	lbf•ft	N•m	lbf•ft	N•m
M3	0.4	0.5	1.3	1.8
M4	2.2	3	3.3	4.5
M6	7	10	11	15
M8	18	25	26	35
M10	37	50	52	70
M12	66	90	92	125
M14	83	112	116	158
M16	166	225	229	310
M20	321	435	450	610
M30	1,103	1 495	1,550	2 100



8.8



10.9

Hydraulic Fitting Torque Values

Tightening Flare Type Tube Fittings

1. Check flare and flare seat for defects that might cause leakage.
2. Align tube with fitting before tightening.
3. Hand-tighten swivel nut until snug.
4. To prevent twisting the tube, use two wrenches. Place one wrench on the connector body and tighten the swivel nut with the second. Torque to values shown.

If a torque wrench is not available, use the FFFT (Flats From Finger Tight) method.

Hydraulic Fitting Torque					
Tube Size OD	Hex Size Across Flats	Torque value		Flats From Finger Tight	
Inches	Inches	lbf•ft	N•m	Flats	Turns
3/16	7/16	6	8	2	1/6
1/4	9/16	11–12	15–17	2	1/6
5/16	5/8	14–16	19–22	2	1/6
3/8	11/16	20–22	27–30	1-1/4	1/6
1/2	7/8	44–48	59–65	1	1/6
5/8	1	50–58	68–79	1	1/6
3/4	1-1/4	79–88	107–119	1	1/8
1	1-5/8	117–125	158–170	1	1/8

Values shown are for non-lubricated connections.

