

EMB Manufacturing Inc. 4144 Boomer Line · St. Clements, On · N0B 2M0 · Canada Ph: (519) 699-9283 · Fax: (519) 699-4146 www.wallensteinequipment.com

WX450 Skidsteer Splitter Parts Manual

S/N 190001 & After



Refer to the operators manual for safe operation and maintenance

2034 WX450 RevC2 Parts Manual.110511 170516

Foreword

EMB Mfg. has prepared this parts manual to assist customers in ordering quality OEM replacement parts.

Proper and regular service and replacing old, worn or broken parts with the correct OEM parts are essential to prolonging the life of your EMB product. Please refer to this manual before ordering any replacement parts.

All information contained in this parts manual is based on the latest product specification available at the time of printing this manual. If your product differs from the specifications contained within this manual contact EMB Mfg. for information.

EMB reserves the right to alter specifications on their products at any time.

Reproduction of this parts manual of any kind is prohibited without prior written permission from EMB Mfg.

Table of Contents

Bolt Torque	4
Hydrualic Fitting Torque	5
Cylinder	6
Main Parts	7
Valve Assembly	9
Decal Breakdown	10

2034 WX450 RevC2 Parts Manual.110511

WALLENSTEIN by EMB Mfg.

Bolt Torque

CHECKING BOLT TORQUE

Thetablesshownbelowgivecorrecttorque values for various bolts and capscrews. Tighten all bolts to the torques specified in chart unless otherwise noted. Check tightness of bolts periodically, using bolt torque chart as a guide. Replace hardware with the same strength bolt.

ENGLISH TORQUE SPECIFICATIONS						
Bolt			Bolt T	orque*		
Diamter "A"	amter SA			E 5 (Ib-ft)	SAE 8 (N.m) (lb-ft)	
1/4"	8	6	12	9	17	12
5/16"	13	10	25	19	36	27
3/8"	27	20	45	33	63	45
7/16"	41	30	72	53	100	75
1/2"	61	45	110	80	155	115
9/16"	95	60	155	115	220	165
5/8"	128	95	215	160	305	220
3/4"	225	165	390	290	540	400
7/8"	230	170	570	420	880	650
1"	345	225	850	630	1320	970
		SAE-2		SAE-5	SAE-8	i
0	,	* ~	~	~	~	




METRIC TORQUE SPECIFICATIONS

Torque figures indicated above are valid for non-greased or non-oiled threads and heads unless otherwise specified. Therefore, do not grease or oil bolts or capscrews unless otherwise specified in this manual. When using locking elements, increase torque values by 5%.

* Torque value for bolts and capscrews are identified by their head markings.

Bolt	Bolt Torque*				
Diameter	8.8		10	.9	
"A"	(N.m)	(lb-ft)	(N.m)	(lb-ft)	
M3	0.5	0.4	1.8	1.3	
M4	3	2.2	4.5	3.3	
M5	6	4	9	7	
M6	10	7	15	11	
M8	25	18	35	26	
M10	50	37	70	52	
M12	90	66	125	92	
M14	140	103	200	148	
M16	225	166	310	229	
M20	435	321	610	450	
M24	750	553	1050	774	
M30	1495	1103	2100	1550	
M36	2600	1917	3675	2710	
	¥	A	A		




Hydraulic Fitting Torque

Tightening Flare Type Tube Fittings *

- 1. Check flare and flare seat for defects that might cause leakage.
- 2. Align tube with fitting before tightening.
- 3. Lubricate connection and hand tighten swivel nut until snug.
- 4. To prevent twisting the tube(s), use two wrenches. Place one wrench on the connector body and with the second tighten the swivel nut to the torque shown.


Tube Size OD	Nut Size Across Flats	Torque Recommend Value• Turns To Tigl (After Fing Tightening		Tighten Finger	
(in.)	(in.)	(N.m)	(lb-ft)	(Flats)	(Turn)
3/16	7/16	8	6	1	1/6
1/4	9/16	12	9	1	1/6
5/16	5/8	16	12	1	1/6
3/8	11/16	24	18	1	1/6
1/2	7/8	46	34	1	1/6
5/8	1	62	46	1	1/6
3/4	1-1/4	102	75	3/4	1/8
7/8	1-3/8	122	90	3/4	1/8

The torque values shown are based on lubricated connections as in reassembly.

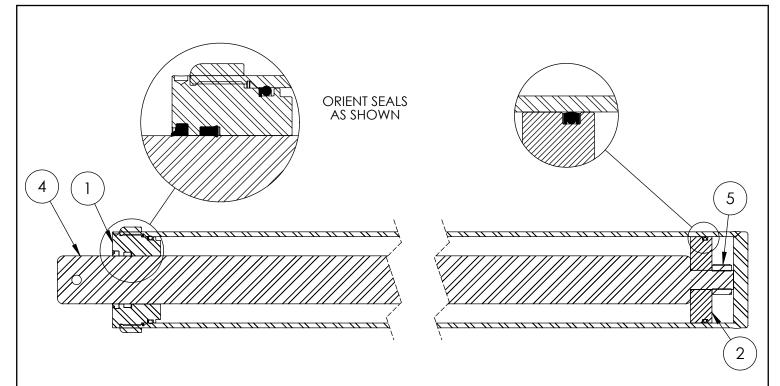

4-1/2" x 36" STROKE CYLINDER PARTS

ITEM	PART NO.	DESCRIPTION	QTY
1	G450-250SA	4-1/2" Bore x 2-1/2" Rod Gland With Seals	1
2	P100-450SA	4-1/2" Bore Piston With Seals	1
3	2032C2011	Barrel, 4-1/2"	1
4	2032C2013	Rod,2-1/2x 1	1
5	Z72292G8	Hex Lock Nut 1NF Grade 8	1
6	SLK-4525	Seal Kit, 4-1/2 x 2-1/2	1

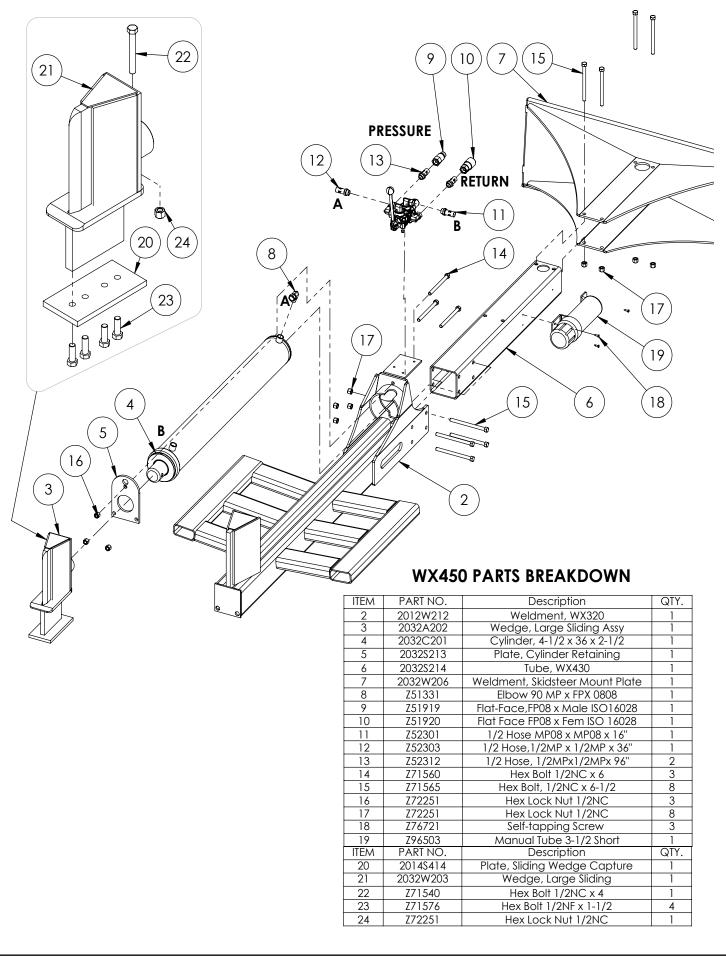

This Page is Intentionally Blank

